

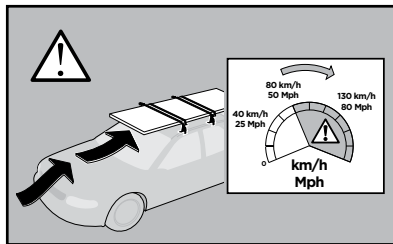
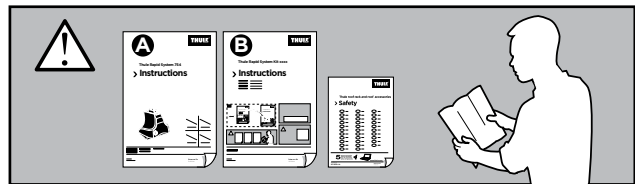


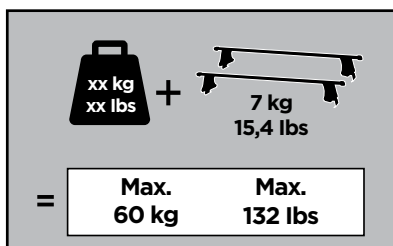

Thule Rapid System Kit 1769

> Instructions

RENAULT Espace, 5-dr MPV, 15-

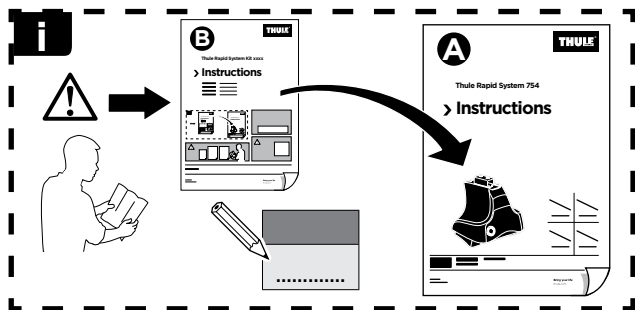


ISO 11154-E

141769
C.20151015
519-1769-01


Bring your life
thule.com




03 x2



165 x1



166 x1



1345 x2



1346 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
RENAULT Espace, 5-dr MPV, 15-	52	1171	46 1/8

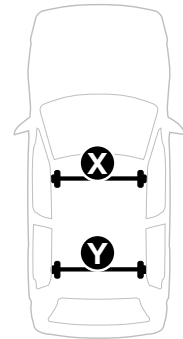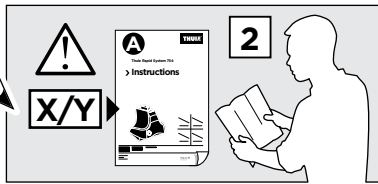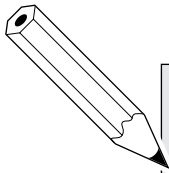


	Y (scale)	Y (mm)	Y (inch)
RENAULT Espace, 5-dr MPV, 15-	49	1141	44 7/8

2

RENAULT Espace, 5-dr MPV, 15-

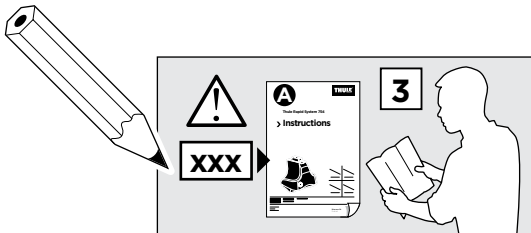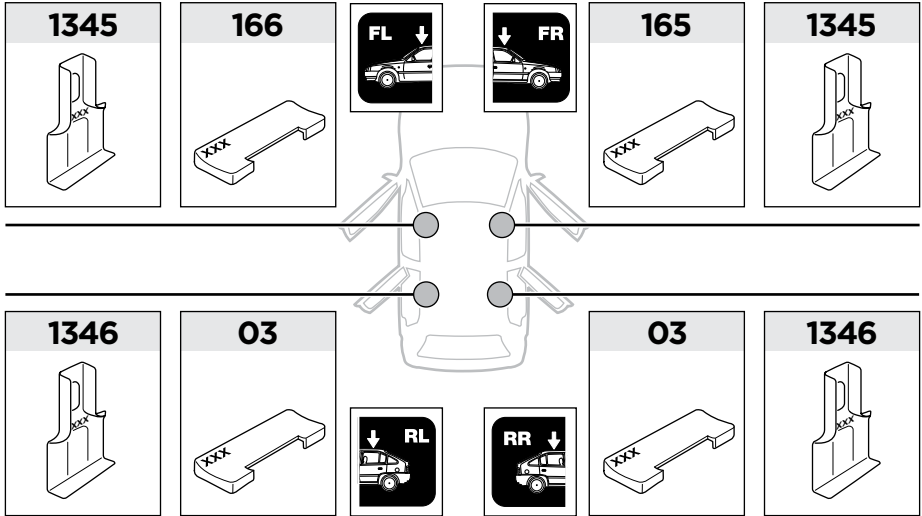

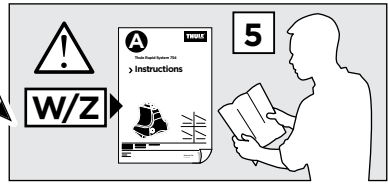3

	W (mm)	Z (mm)	W (inch)	Z (inch)
RENAULT Espace , 5-dr MPV, 15-	440	690	17 ³/₈	27 ¹/₈

