
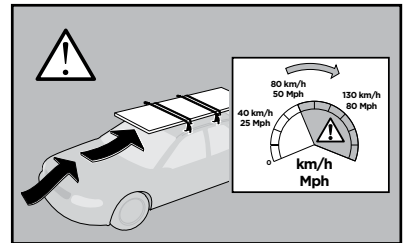
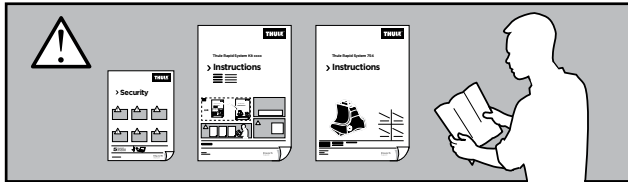
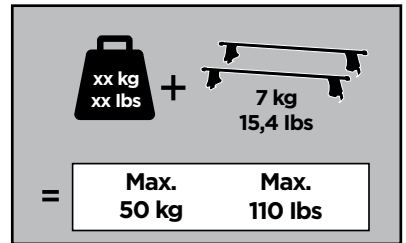


Thule Rapid System Kit 1378

> Instructions

DACIA Logan, 4-dr Sedan, 04-

DACIA Sandero, 5-dr Hatchback, 08-

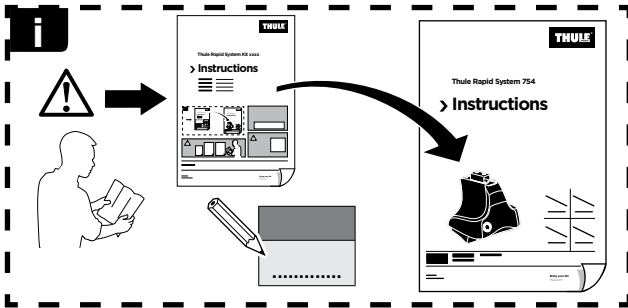






ISO 11154-E

141378

C.20121010
519-1378-01



Bring your life

thule.com

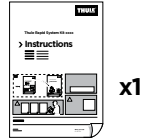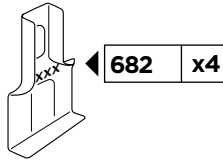

1



	X (scale)	X (mm)	X (inch)
DACIA Logan , 4-dr Sedan, 04-	35,5	1006	39 ⁵ / ₈
DACIA Sandero , 5-dr Hatchback, 08-	33,5	986	38 ⁷ / ₈

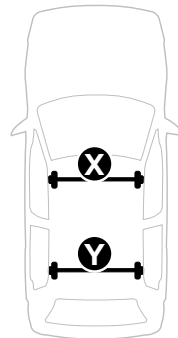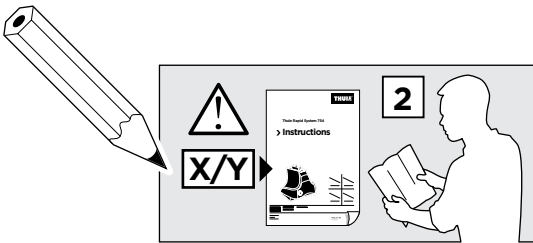

	Y (scale)	Y (mm)	Y (inch)
DACIA Logan , 4-dr Sedan, 04-	34,5	996	39 ¹ / ₄
DACIA Sandero , 5-dr Hatchback, 08-	29,5	946	37 ¹ / ₄

2

DACIA Logan, 4-dr Sedan, 04-
DACIA Sandero, 5-dr Hatchback, 08-

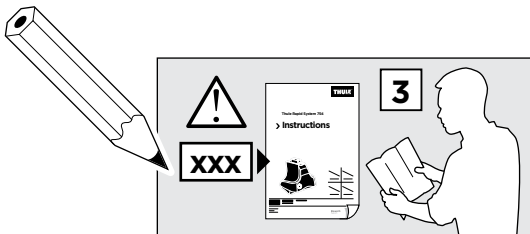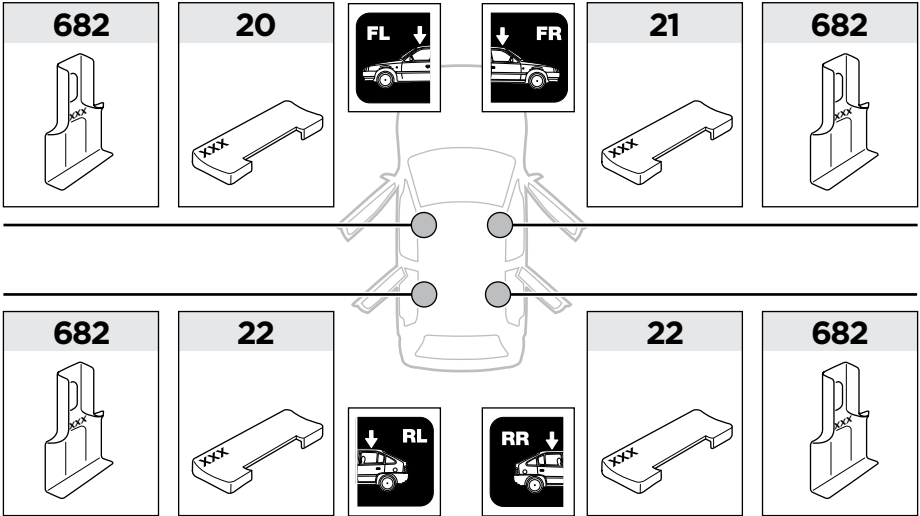

3

