
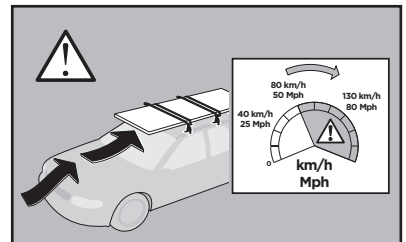
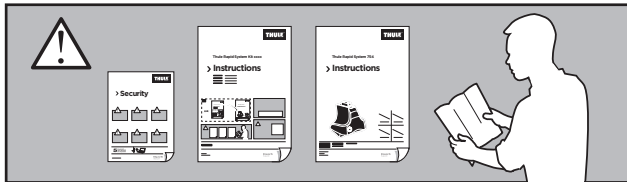
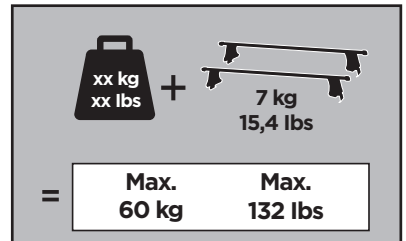


# Thule Rapid System Kit 1388

# > Instructions

HYUNDAI Sonata, 4-dr Sedan, 05-09 / \*06-10

\*North America

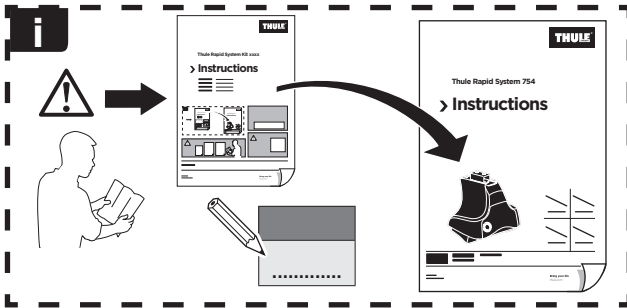


ISO 11154-E

**141388**



C.20150912  
519-1388-03

**Bring your life**  
thule.com

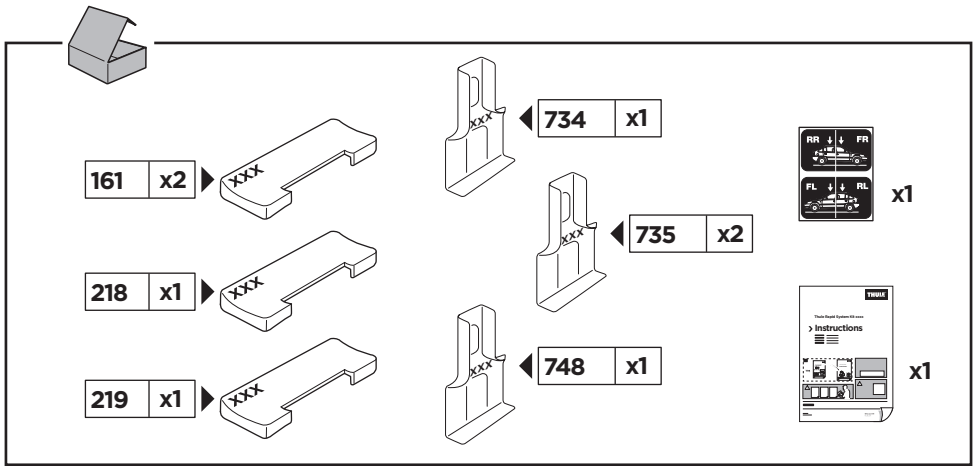

**1**



	X (scale)	X (mm)	X (inch)
<b>HYUNDAI Sonata, 4-dr Sedan, 05-09 / *06-10</b>	<b>42,5</b>	<b>1076</b>	<b>42 <sup>3</sup>/<sub>8</sub></b>

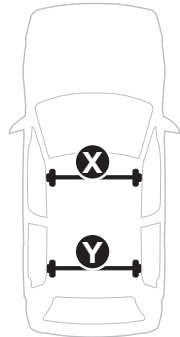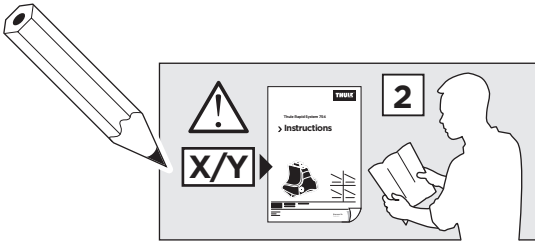


	Y (scale)	Y (mm)	Y (inch)
<b>HYUNDAI Sonata, 4-dr Sedan, 05-09 / *06-10</b>	<b>39</b>	<b>1041</b>	<b>41</b>

2

HYUNDAI Sonata, 4-dr Sedan, 05-09 / \*06-10

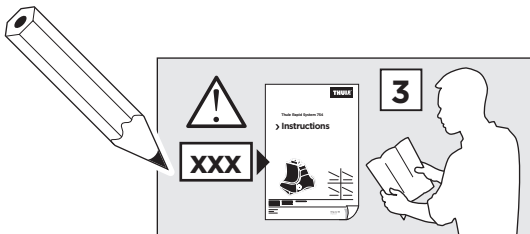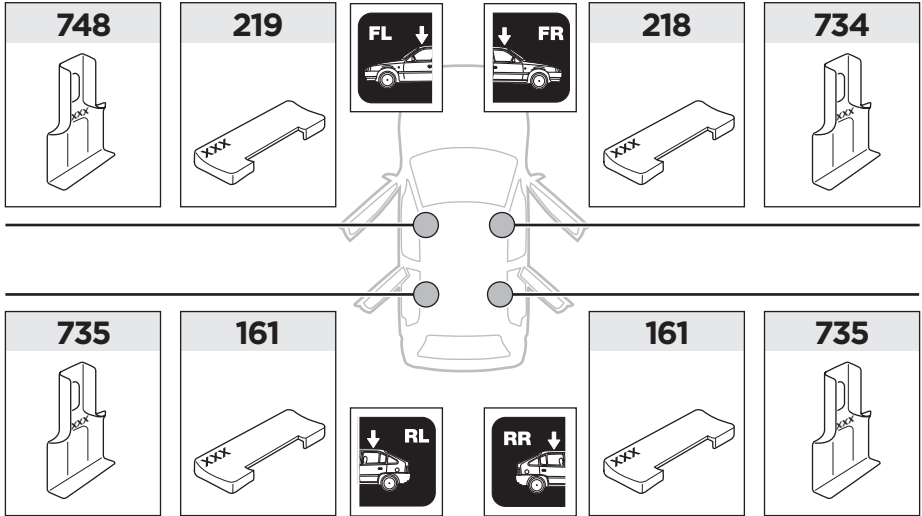

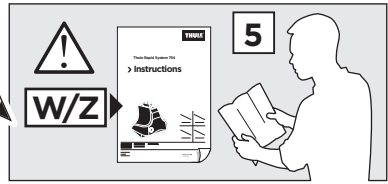**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>HYUNDAI Sonata</b> , 4-dr Sedan, 05-09 / *06-10	<b>230</b>	<b>670</b>	<b>9</b>	<b>26 <sup>3</sup>/<sub>8</sub></b>

