



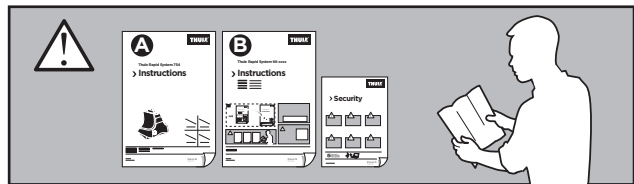

Thule Rapid System Kit 1309

> Instructions

SSANGYONG Rexton, 5-dr SUV, 02-07

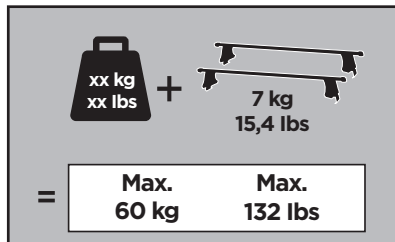

ISO 11154-E


141309

C.20130619
519-1309-01


Bring your life
thule.com



65 x2



66 x2



519 x4






x1



x1

1


	X (scale)	X (mm)	X (inch)
SSANGYONG Rexton , 5-dr SUV, 02-07	40	1051	41 ³ / ₈

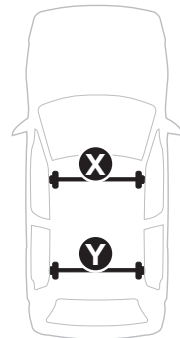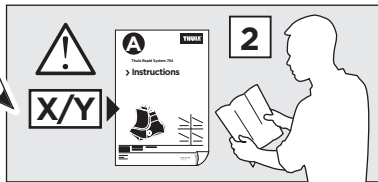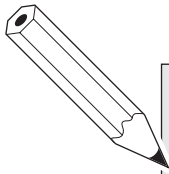


	Y (scale)	Y (mm)	Y (inch)
SSANGYONG Rexton , 5-dr SUV, 02-07	37	1021	40 ¹ / ₄

2

SSANGYONG Rexton, 5-dr SUV, 02-07

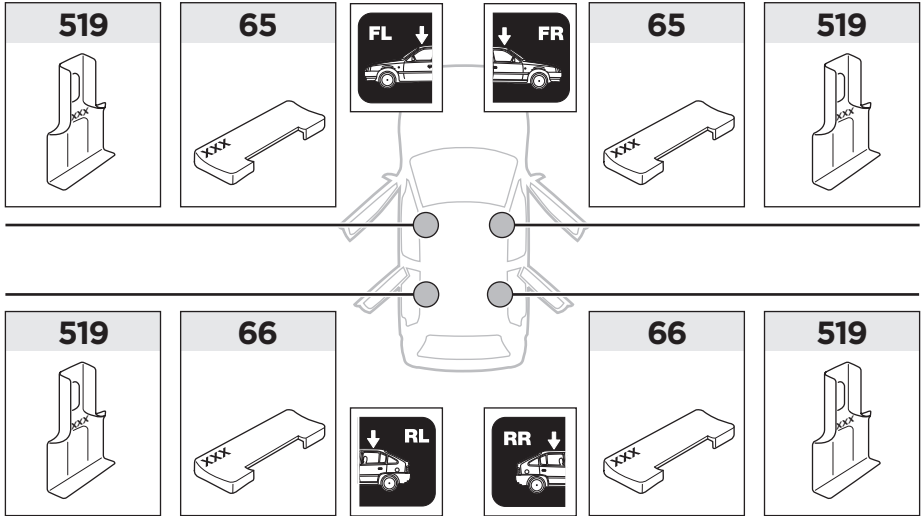

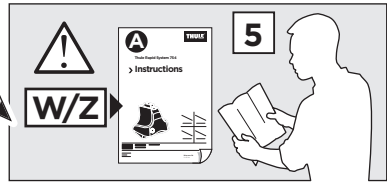3

	W (mm)	Z (mm)	W (inch)	Z (inch)
SSANGYONG Rexton , 5-dr SUV, 02-07	580	800	22 ⁷/₈	31 ¹/₂

