







# Thule Rapid System Kit 1449

# > Instructions

FORD Mondeo, 5-dr Estate, 07-14\*




\* without railing

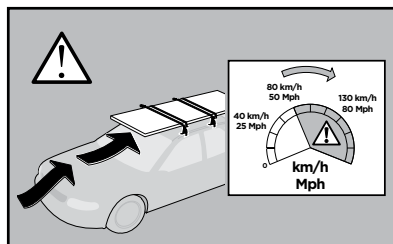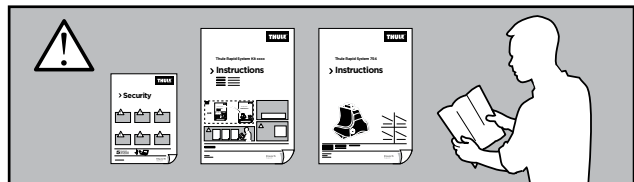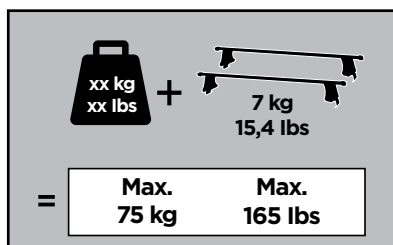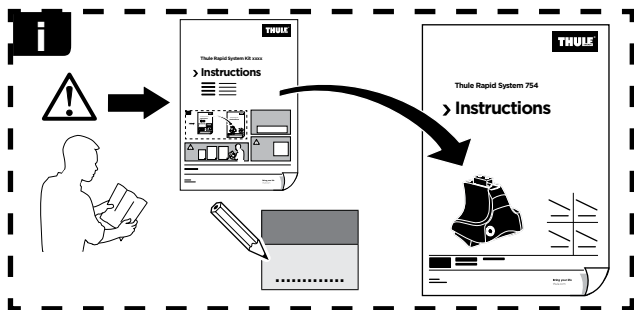

ISO 11154-E



141449  
C.20150224  
519-1449-02

Bring your life  
thule.com

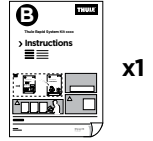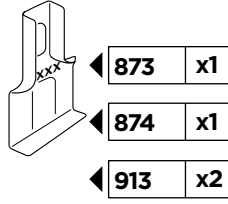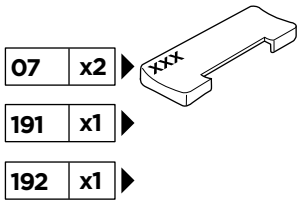

**1**



	X (scale)	X (mm)	X (inch)
<b>FORD Mondeo, 5-dr Estate, 07-14</b>	<b>41</b>	<b>1061</b>	<b>41 <sup>3</sup>/<sub>4</sub></b>

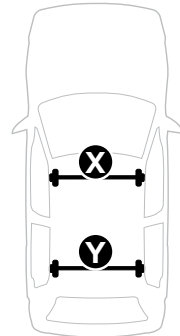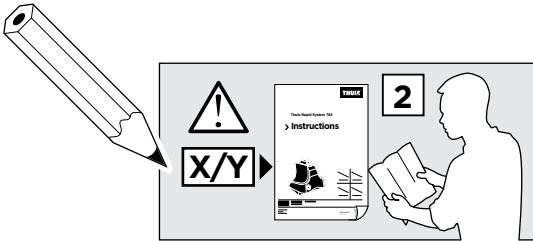


	Y (scale)	Y (mm)	Y (inch)
<b>FORD Mondeo, 5-dr Estate, 07-14</b>	<b>35</b>	<b>1001</b>	<b>39 <sup>3</sup>/<sub>8</sub></b>

2

FORD Mondeo, 5-dr Estate, 07-14

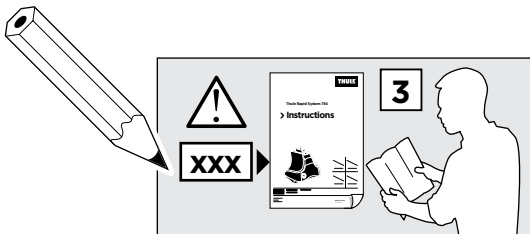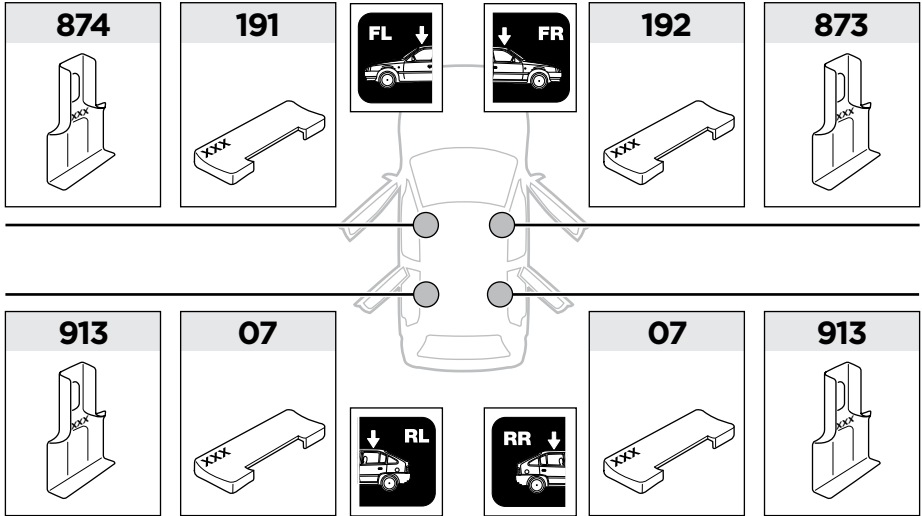

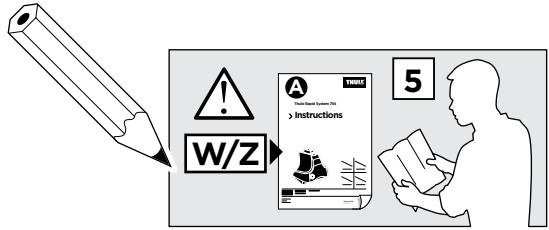

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>FORD Mondeo</b> , 5-dr Estate, 07-14	<b>270</b>	<b>810</b>	<b>10 <sup>5</sup>/<sub>8</sub></b>	<b>31 <sup>7</sup>/<sub>8</sub></b>

