
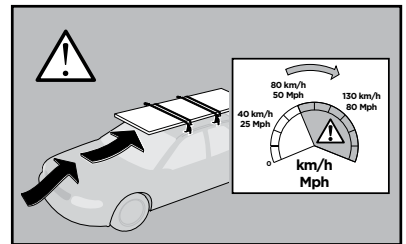
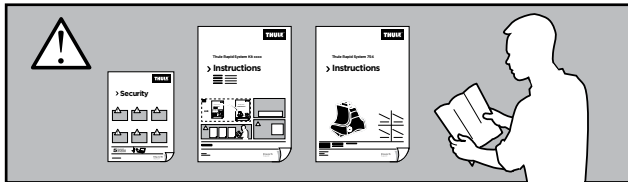
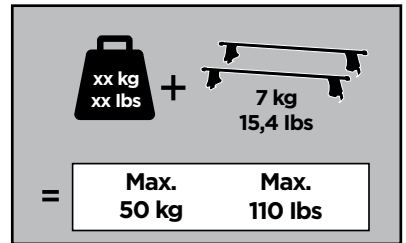


Thule Rapid System Kit 1547


> Instructions

SCION IQ, 3-dr Hatchback, *10-
TOYOTA IQ, 3-dr Hatchback, 09-

*North America

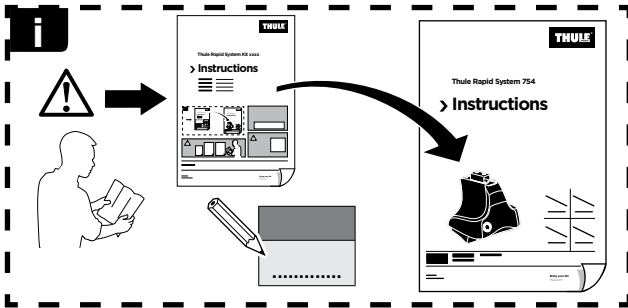


ISO 11154-E

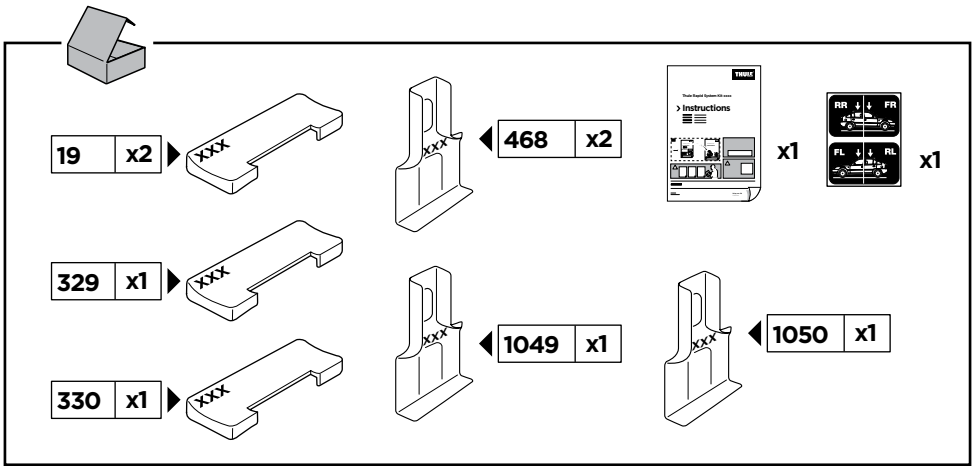

1



	X (scale)	X (mm)	X (inch)
SCION IQ , 3-dr Hatchback, *10-	41	1061	41 ³/₄
TOYOTA IQ , 3-dr Hatchback, 09-	41	1061	41 ³/₄

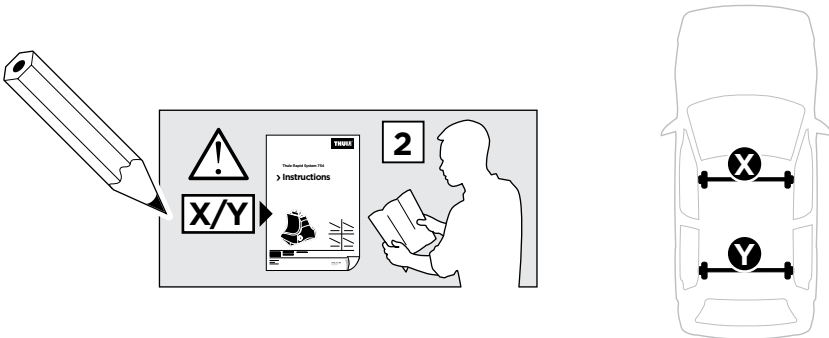


	Y (scale)	Y (mm)	Y (inch)
SCION IQ , 3-dr Hatchback, *10-	32,5	976	38 ³/₈
TOYOTA IQ , 3-dr Hatchback, 09-	32,5	976	38 ³/₈

2

SCION IQ, 3-dr Hatchback, *10-
TOYOTA IQ, 3-dr Hatchback, 09-

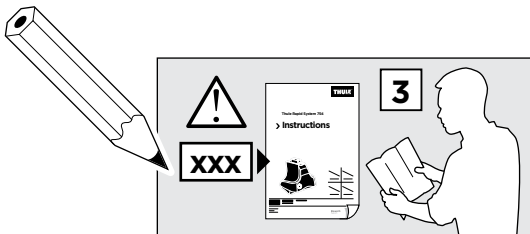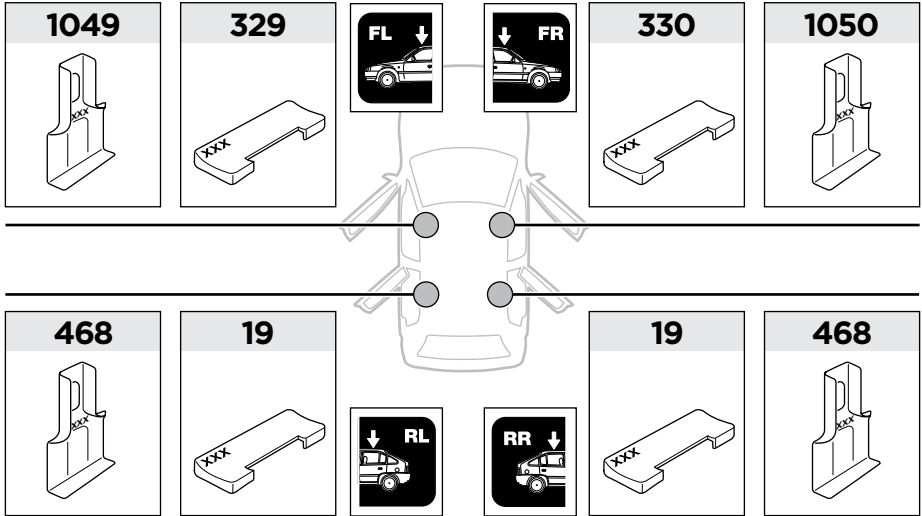

3

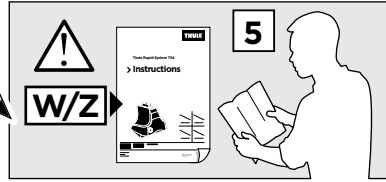

	W (mm)	Z (mm)	W (inch)	Z (inch)
SCION IQ , 3-dr Hatchback, *10-	20	600	3/4	23 5/8
TOYOTA IQ , 3-dr Hatchback, 09-	20	600	3/4	23 5/8

