



## Thule Rapid System Kit 1668

# > Instructions






**TOYOTA Prius**, 5-dr Estate, 12-

**TOYOTA Prius**, 5-dr Estate, 12- (with glass roof)

**TOYOTA Prius V**, 5-dr Wagon, \*12-

**TOYOTA Prius V**, 5-dr Wagon, \*12- (with glass roof)

\*North America

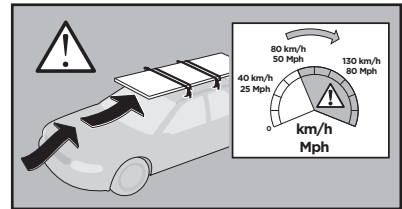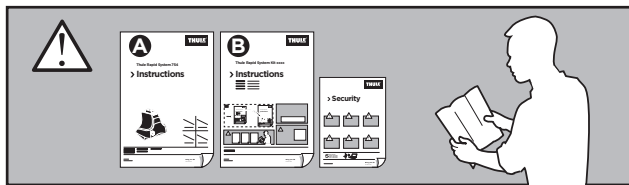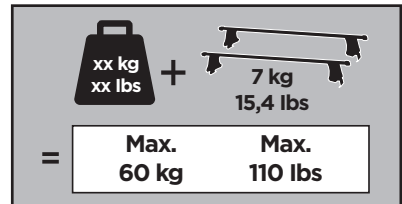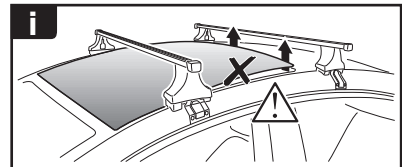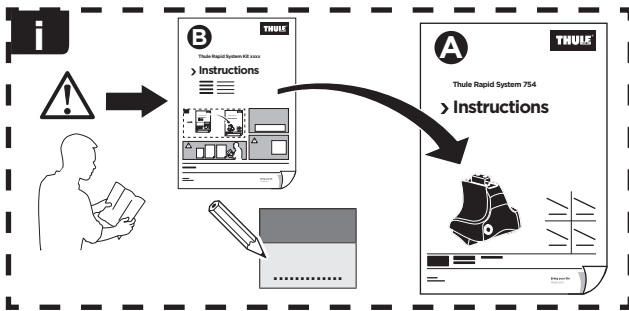

ISO 11154-E


141668

C.20140609  
519-1668-02


Bring your life  
thule.com




174 x2



386 x1



387 x1



186 x2



319 x2






x1



x1

# 1

	X (scale)	X (mm)	X (inch)
<b>TOYOTA Prius</b> , 5-dr Estate, 12-	41	1061	41 <sup>3</sup> / <sub>4</sub>
<b>TOYOTA Prius</b> , 5-dr Estate, 12- (with glass roof)	41	1061	41 <sup>3</sup> / <sub>4</sub>
<b>TOYOTA Prius V</b> , 5-dr Wagon, *12-	41	1061	41 <sup>3</sup> / <sub>4</sub>
<b>TOYOTA Prius V</b> , 5-dr Wagon, *12- (with glass roof)	41	1061	41 <sup>3</sup> / <sub>4</sub>

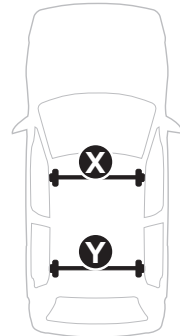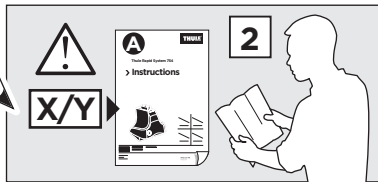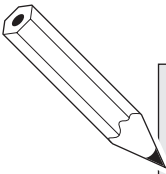

	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Prius</b> , 5-dr Estate, 12-	37,5	1026	40 <sup>3</sup> / <sub>8</sub>
<b>TOYOTA Prius</b> , 5-dr Estate, 12- (with glass roof)	37,5	1026	40 <sup>3</sup> / <sub>8</sub>
<b>TOYOTA Prius V</b> , 5-dr Wagon, *12-	37,5	1026	40 <sup>3</sup> / <sub>8</sub>
<b>TOYOTA Prius V</b> , 5-dr Wagon, *12- (with glass roof)	37,5	1026	40 <sup>3</sup> / <sub>8</sub>



# 2

**TOYOTA Prius**, 5-dr Estate, 12-


**TOYOTA Prius**, 5-dr Estate, 12- (with glass roof)

**TOYOTA Prius V**, 5-dr Wagon, \*12-

**TOYOTA Prius V**, 5-dr Wagon, \*12- (with glass roof)

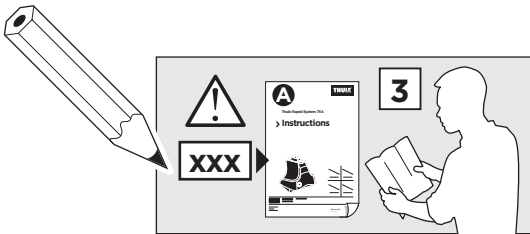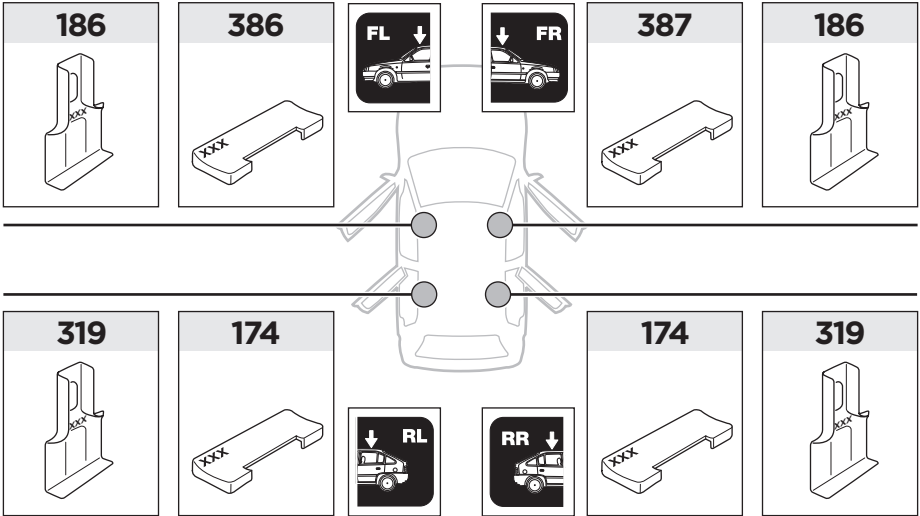

**3**

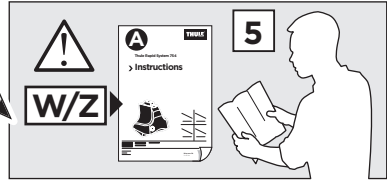

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Prius</b> , 5-dr Estate, 12-	<b>310</b>	<b>710</b>	<b>12 1/4</b>	<b>28</b>
<b>TOYOTA Prius</b> , 5-dr Estate, 12- (with glass roof)	<b>310</b>	<b>710</b>	<b>12 1/4</b>	<b>28</b>
<b>TOYOTA Prius V</b> , 5-dr Wagon, *12-	<b>310</b>	<b>710</b>	<b>12 1/4</b>	<b>28</b>
<b>TOYOTA Prius V</b> , 5-dr Wagon, *12- (with glass roof)	<b>310</b>	<b>710</b>	<b>12 1/4</b>	<b>28</b>

