







# Thule Rapid System Kit 1620

# > Instructions

FORD Focus, 4-dr Sedan, \*08-11

\*North America

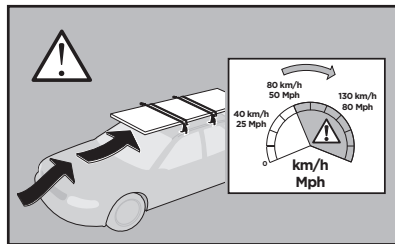
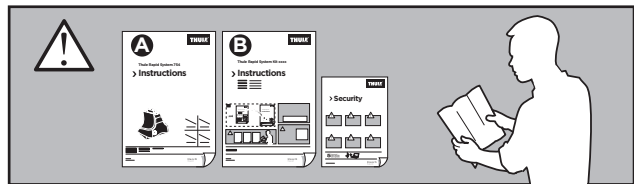
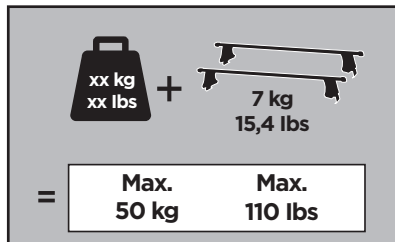
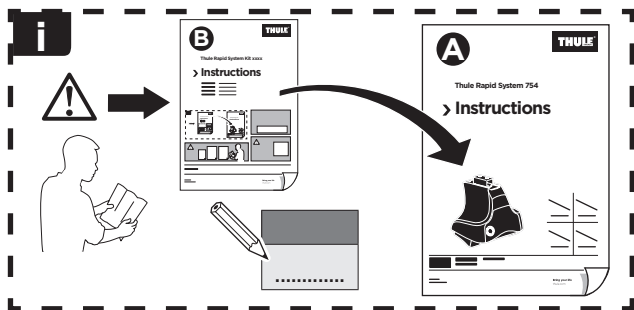


ISO 11154-E

141620

C.20130619  
519-1620-01

Bring your life  
thule.com

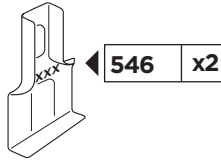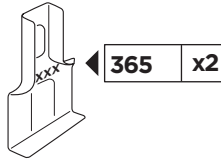




x1



x1

1



	X (scale)	X (mm)	X (inch)
<b>FORD Focus, 4-dr Sedan, *08-11</b>	<b>24</b>	<b>891</b>	<b>35 1/8</b>

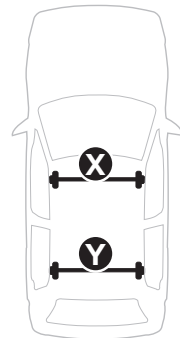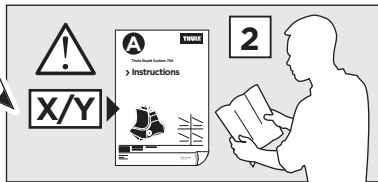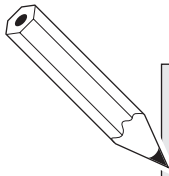


	Y (scale)	Y (mm)	Y (inch)
<b>FORD Focus, 4-dr Sedan, *08-11</b>	<b>22,5</b>	<b>876</b>	<b>34 1/2</b>

2

FORD Focus, 4-dr Sedan, \*08-11)

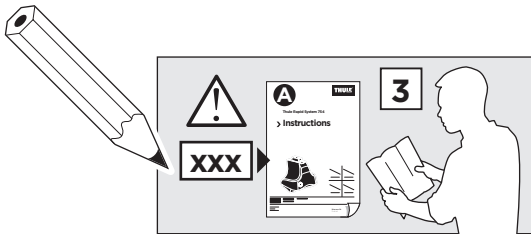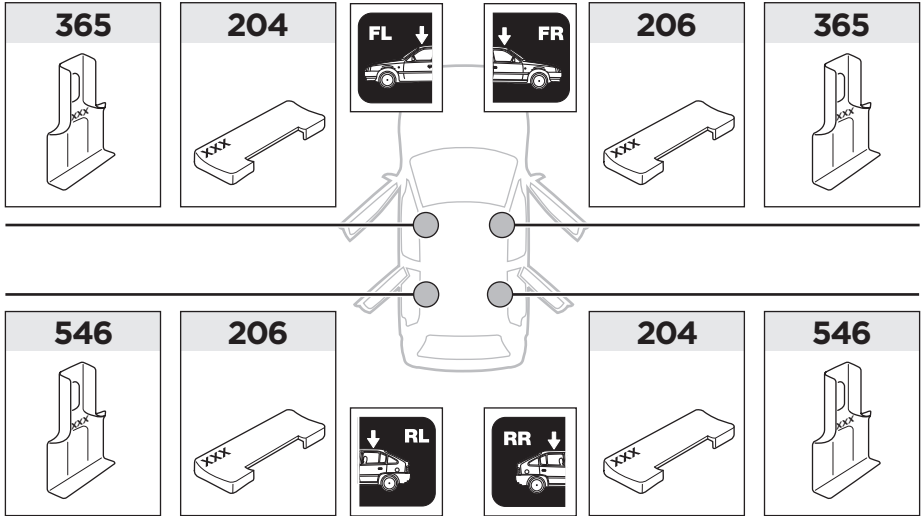

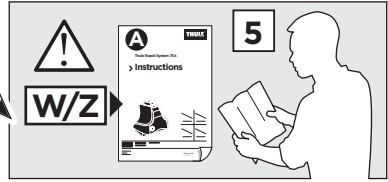**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>FORD Focus, 4-dr Sedan, *08-11</b>	<b>255</b>	<b>650</b>	<b>10</b>	<b>25 1/2</b>

