



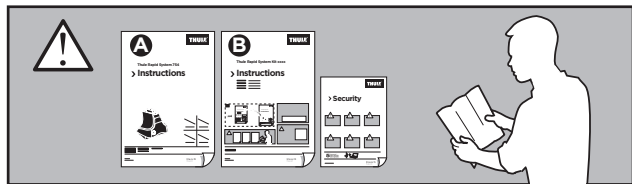

## Thule Rapid System Kit 1355

# > Instructions

SUBARU Justy, 5-dr MPV, 03-07

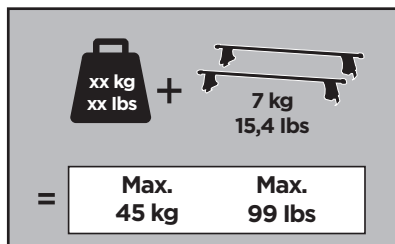

ISO 11154-E


141355

C.20130619  
519-1355-01

Bring your life  
thule.com



04 x4



148 x4






x1



x1

1


	X (scale)	X (mm)	X (inch)
<b>SUBARU Justy, 5-dr MPV, 03-07</b>	<b>35,5</b>	<b>1006</b>	<b>39 <sup>5</sup>/<sub>8</sub></b>

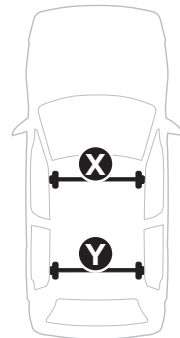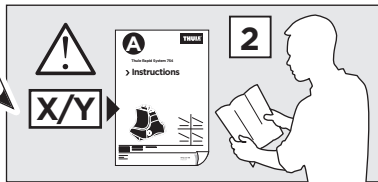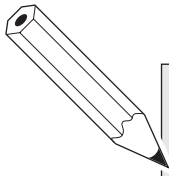


	Y (scale)	Y (mm)	Y (inch)
<b>SUBARU Justy, 5-dr MPV, 03-07</b>	<b>34</b>	<b>991</b>	<b>39</b>

**2**

**SUBARU Justy, 5-dr MPV, 03-07**

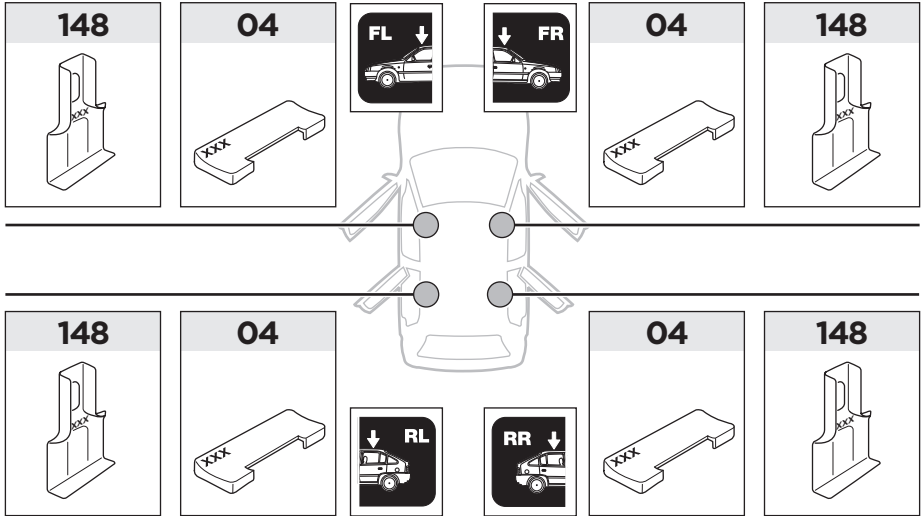

3

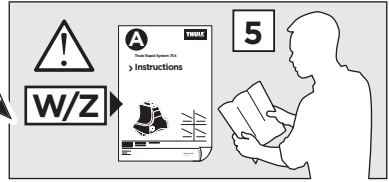

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>SUBARU Justy</b> , 5-dr MPV, 03-07	<b>250</b>	<b>700</b>	<b>9 <sup>7</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

