


Thule Rapid System Kit 1203



> Instructions

- CHRYSLER PT Cruiser**, 5-dr Estate, 00-09
- CHRYSLER PT Cruiser**, 5-dr Wagon, *01-10
- DAEWOO Musso**, 5-dr SUV, 93-05
- SSANGYONG Musso**, 5-dr SUV, 93-05

*North America

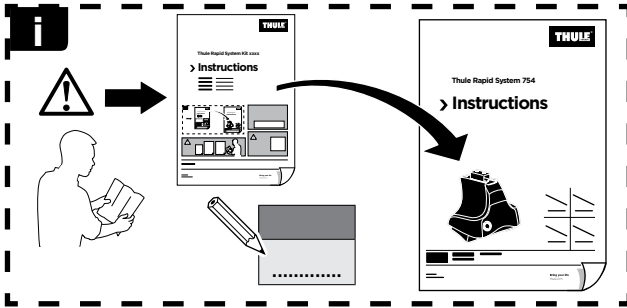


xx kg xx lbs	+		7 kg 15,4 lbs
CHRYSLER PT Cruiser , 5-dr Estate, 00-09 CHRYSLER PT Cruiser , 5-dr Wagon, *01-10	=	Max. 75 kg 165 lbs	
DAEWOO Musso , 5-dr SUV, 93-05 SSANGYONG Musso , 5-dr SUV, 93-05	=	Max. 50 kg 110 lbs	

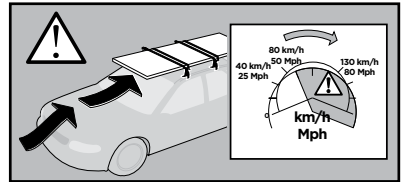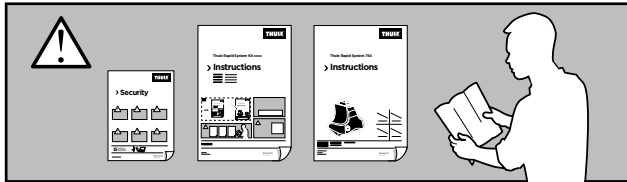

ISO 11154-E




16 x4



363 x4





x1



x1

1

	X (scale)	X (mm)	X (inch)
CHRYSLER PT Cruiser , 5-dr Estate, 00-09	32,5	976	38 ³ / ₈
CHRYSLER PT Cruiser , 5-dr Wagon, *01-10	32,5	976	38 ³ / ₈
DAEWOO Musso , 5-dr SUV, 93-05	39	1041	41
SSANGYONG Musso , 5-dr SUV, 93-05	39	1041	41

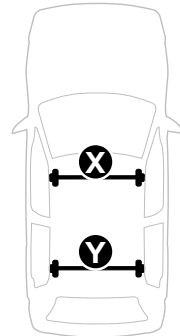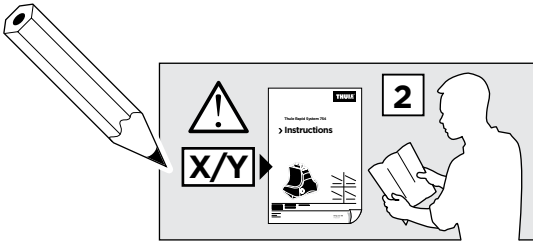

	Y (scale)	Y (mm)	Y (inch)
CHRYSLER PT Cruiser , 5-dr Estate, 00-09	28	931	36 ⁵ / ₈
CHRYSLER PT Cruiser , 5-dr Wagon, *01-10	28	931	36 ⁵ / ₈
DAEWOO Musso , 5-dr SUV, 93-05	38,5	1036	40 ³ / ₄
SSANGYONG Musso , 5-dr SUV, 93-05	38,5	1036	40 ³ / ₄



2

CHRYSLER PT Cruiser, 5-dr Estate, 00-09


CHRYSLER PT Cruiser, 5-dr Wagon, *01-10

DAEWOO Musso, 5-dr SUV, 93-05

SSANGYONG Musso, 5-dr SUV, 93-05

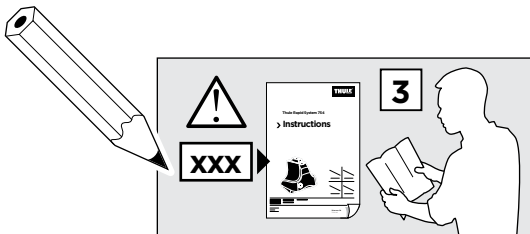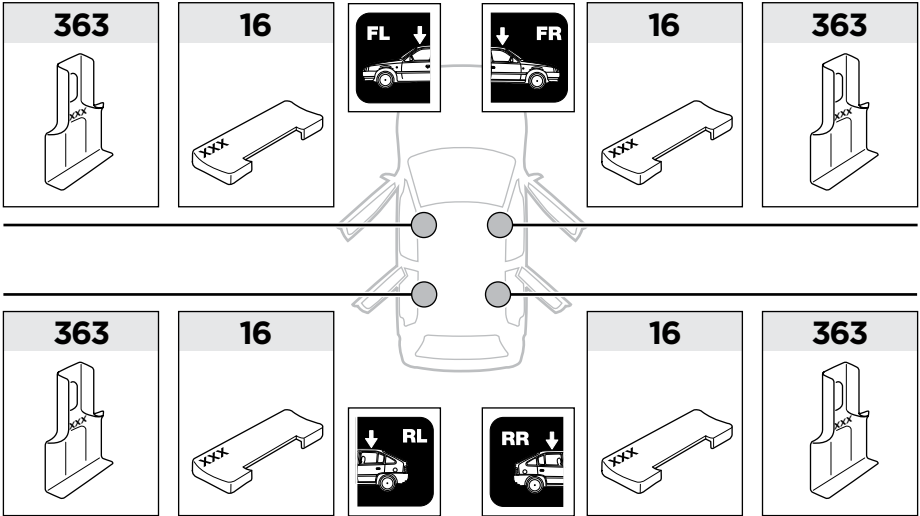

3

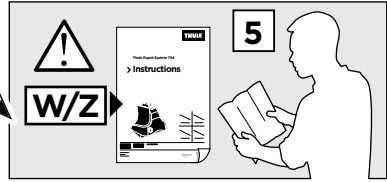

	W (mm)	Z (mm)	W (inch)	Z (inch)
CHRYSLER PT Cruiser , 5-dr Estate, 00-09	290	700	11 ³/₈	27 ¹/₂
CHRYSLER PT Cruiser , 5-dr Wagon, *01-10	290	700	11 ³/₈	27 ¹/₂
DAEWOO Musso , 5-dr SUV, 93-05	300	700	11 ³/₄	27 ¹/₂
SSANGYONG Musso , 5-dr SUV, 93-05	300	700	11 ³/₄	27 ¹/₂

