
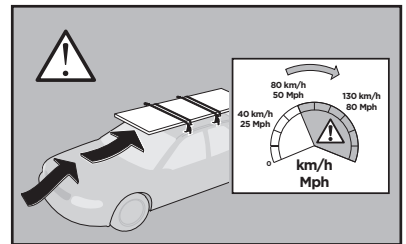
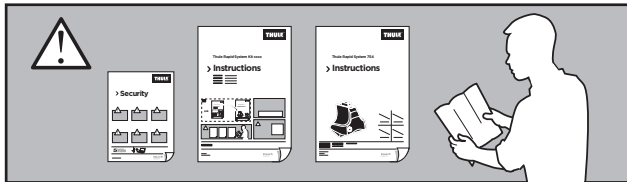
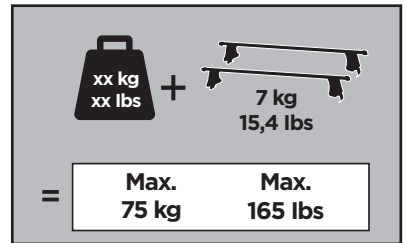


Thule Rapid System Kit 1104

> Instructions

RENAULT Espace, 5-dr MPV, 98-02

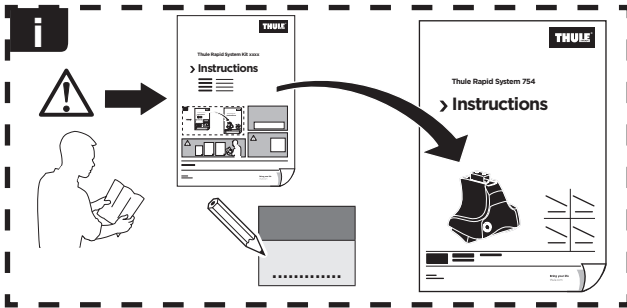

ISO 11154-E


141104

C.20130107
519-1104-01

Bring your life
thule.com




04 x4



166 x4





x1



x1

1


	X (scale)	X (mm)	X (inch)
RENAULT Espace, 5-dr MPV, 98-02	48	1131	44 1/2

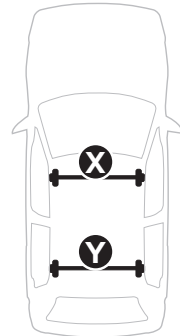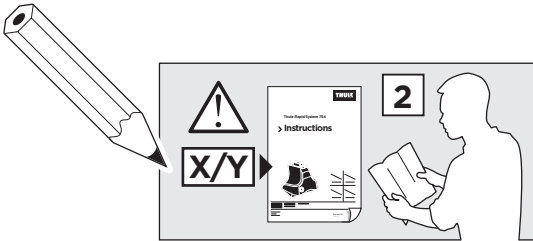


	Y (scale)	Y (mm)	Y (inch)
RENAULT Espace, 5-dr MPV, 98-02	47,5	1126	44 3/8

2

RENAULT Espace, 5-dr MPV, 98-02

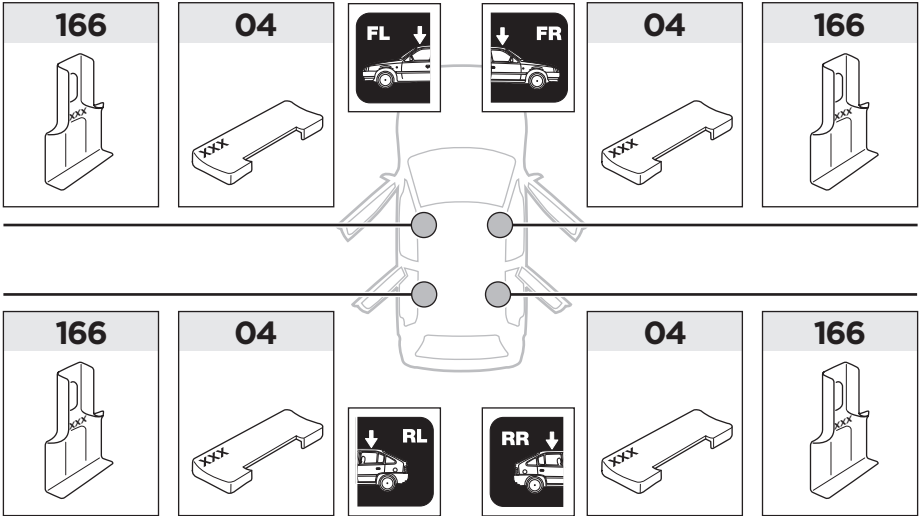

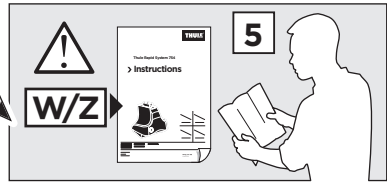3

	W (mm)	Z (mm)	W (inch)	Z (inch)
RENAULT Espace, 5-dr MPV, 98-02	300	700	11 ³/₄	27 ¹/₂

