






Thule XT Kit 3155

> Instructions

- CITROËN** Jumpy, 4-dr Van, 16-
- CITROËN** SpaceTourer, 5-dr Bus, 16-
- PEUGEOT** Expert, 4-dr Van, 16-
- PEUGEOT** Traveller, 5-dr Bus, 16-
- TOYOTA** ProAce, 4-dr Van, 16-
- TOYOTA** ProAce Verso, 5-dr Bus, 16-

This kit is only for vehicles with fixpoint mounting.

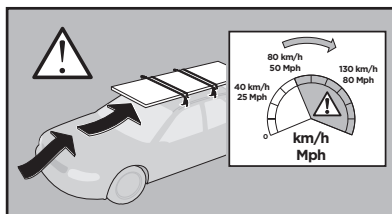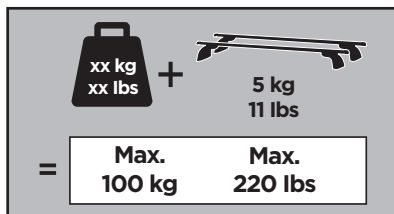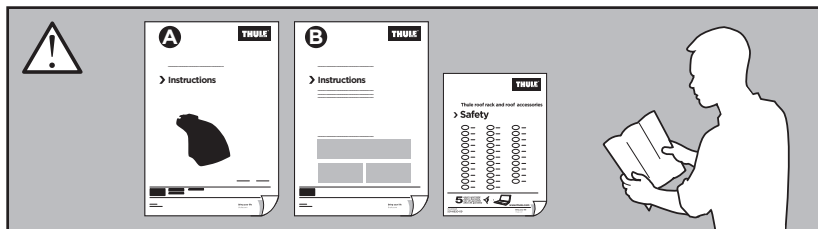


ISO 11154-E

183155

C.20160920
509-3155-01

Bring your life
thule.com

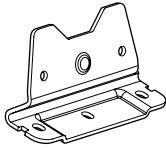


◀ **07** x4




50030
20 mm x4



31310 x4




x1

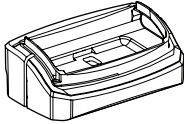

◀ **16** x4



52821 x4

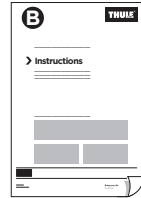


x1

A



12 mm x8




x1

1


07




16




16




07




07



16








16




07




2

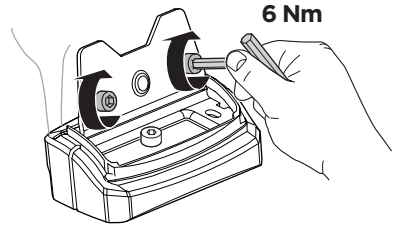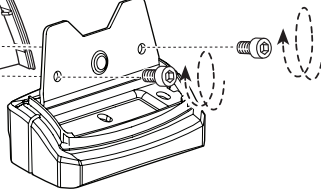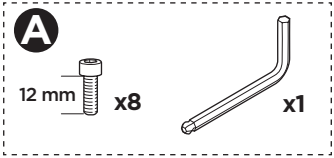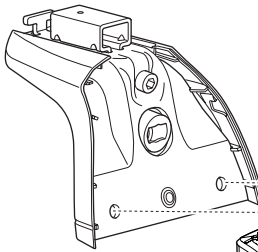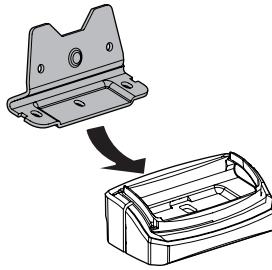



3




x1

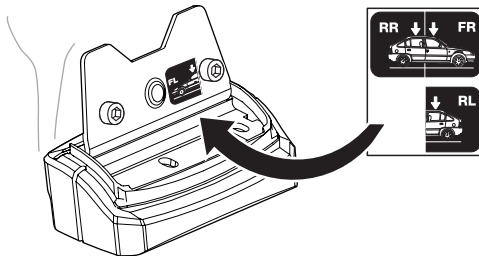


4




A

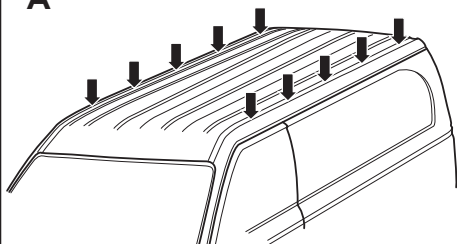


B

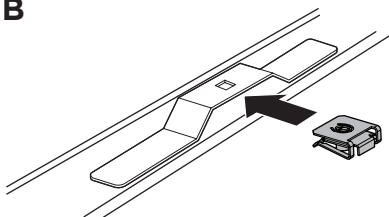

C

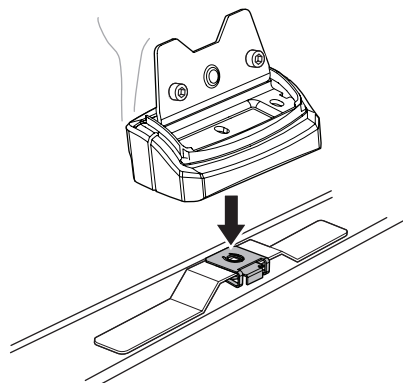

D

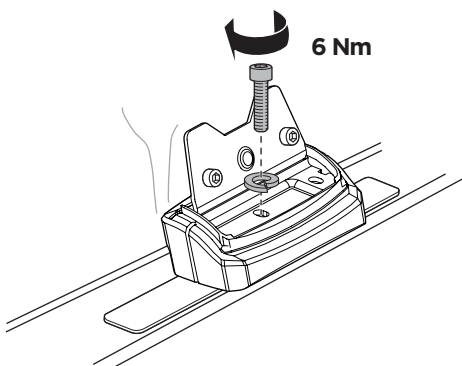

5

