






## Thule Rapid System Kit 1171

# > Instructions

**JAGUAR S-type**, 4-dr Sedan, 99-03, 04-08 / \*00-03, 04-08

\*North America

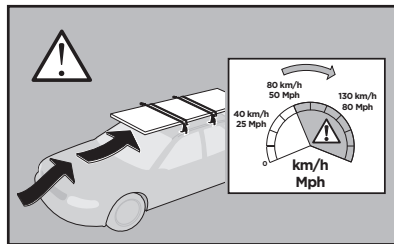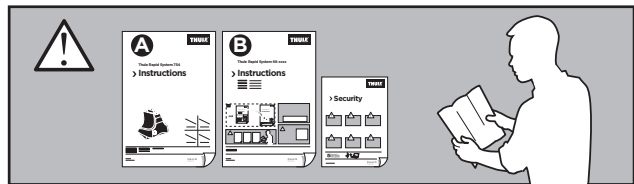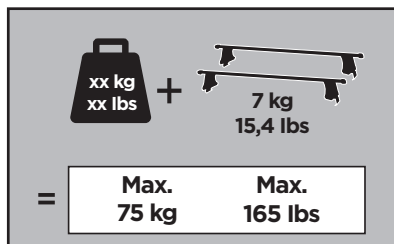

ISO 11154-E

141171

C.20130703  
519-1171-03

Bring your life


thule.com



06 x2



18 x2



331 x4



x1



x1






x4



x4

1



	X (scale)	X (mm)	X (inch)
JAGUAR S-type, 4-dr Sedan, 99-03, 04-08 / *00-03, 04-08	31	961	37 <sup>7</sup> / <sub>8</sub>

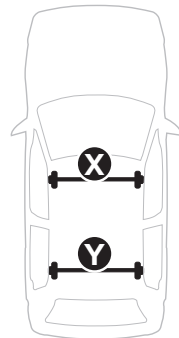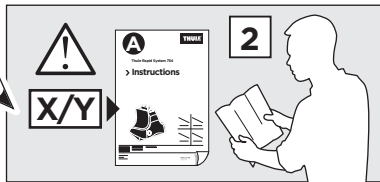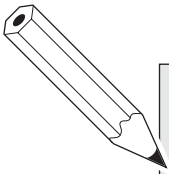

	Y (scale)	Y (mm)	Y (inch)
JAGUAR S-type, 4-dr Sedan, 99-03, 04-08 / *00-03, 04-08	34,5	996	39 <sup>1</sup> / <sub>4</sub>

2

JAGUAR S-type, 4-dr Sedan, 99-03, 04-08 / \*00-03, 04-08

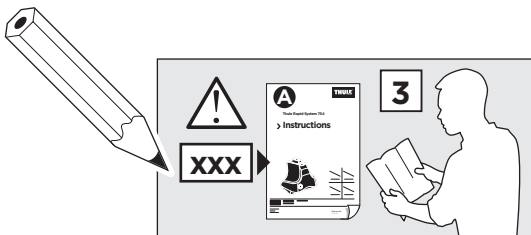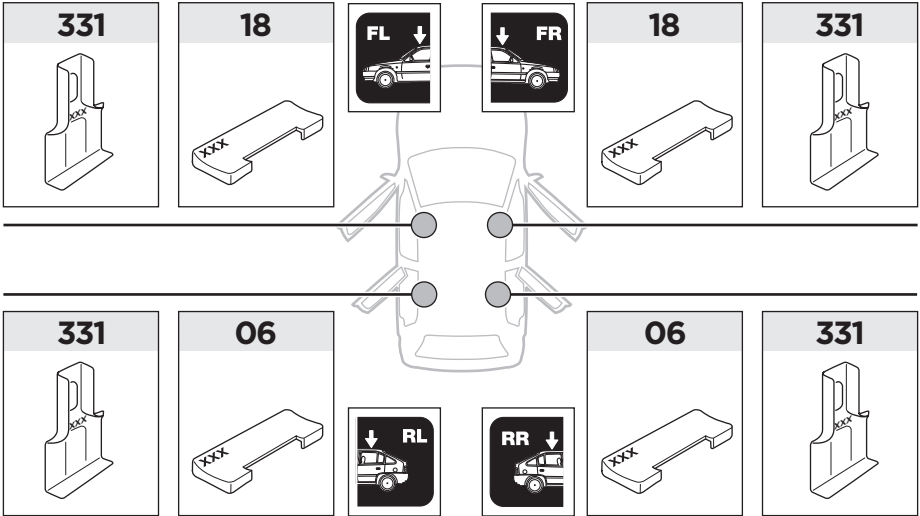

3

