





Thule Rapid System Kit 1040

> Instructions

FORD Galaxy, 5-dr MPV, 96-00

SEAT Alhambra, 5-dr MPV, 96-00


VOLKSWAGEN Sharan, 5-dr MPV, 96-00

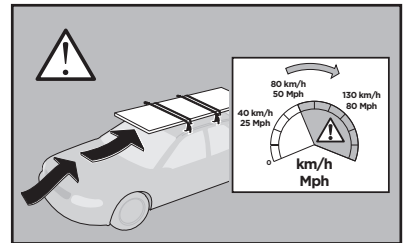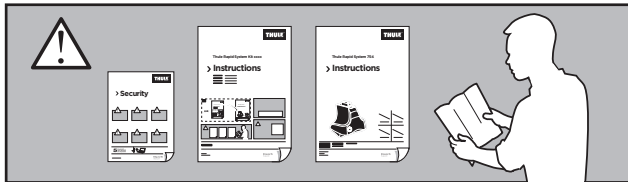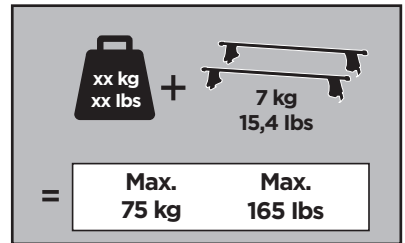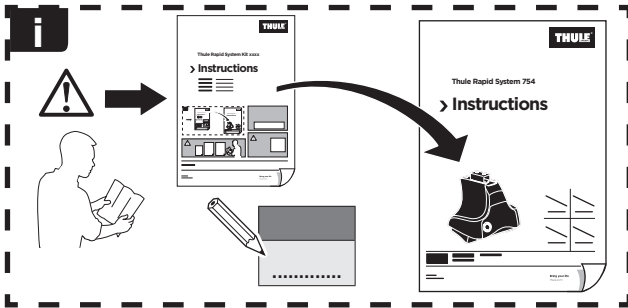

ISO 11154-E



17 x4



89 x4






x1



x1

1

	X (scale)	X (mm)	X (inch)
FORD Galaxy , 5-dr MPV, 96-00	39	1041	41
SEAT Alhambra , 5-dr MPV, 96-00	39	1041	41
VOLKSWAGEN Sharan , 5-dr MPV, 96-00	39	1041	41

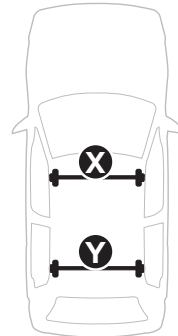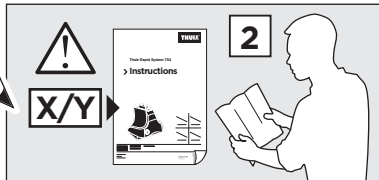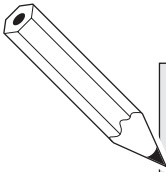



	Y (scale)	Y (mm)	Y (inch)
FORD Galaxy , 5-dr MPV, 96-00	35,5	1006	39 ⁵ / ₈
SEAT Alhambra , 5-dr MPV, 96-00	35,5	1006	39 ⁵ / ₈
VOLKSWAGEN Sharan , 5-dr MPV, 96-00	35,5	1006	39 ⁵ / ₈

2


FORD Galaxy, 5-dr MPV, 96-00

SEAT Alhambra, 5-dr MPV, 96-00

VOLKSWAGEN Sharan, 5-dr MPV, 96-00

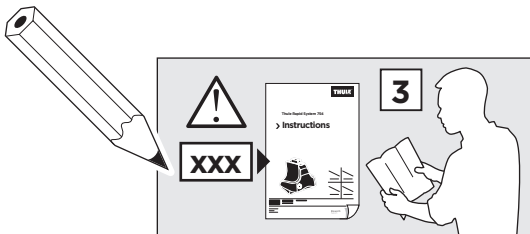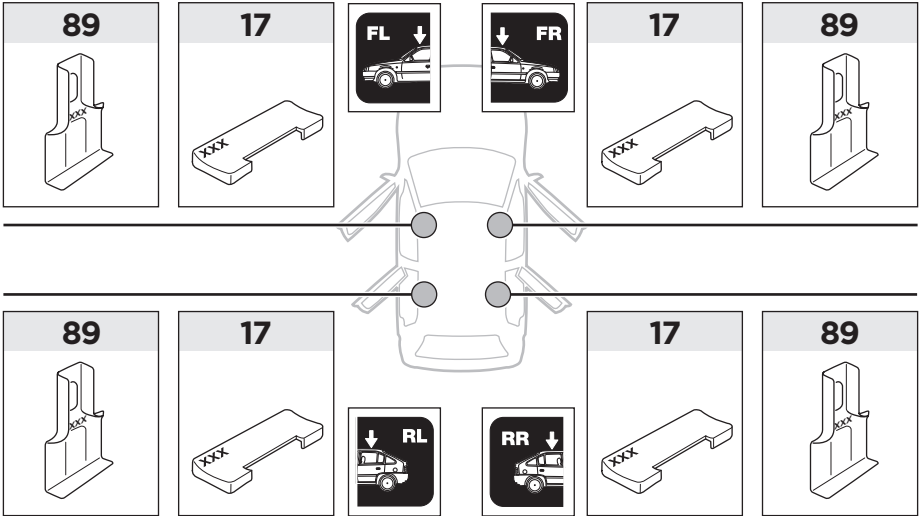

3

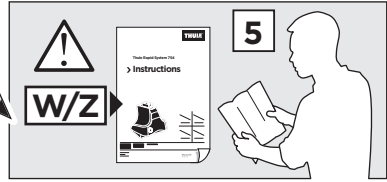

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD Galaxy , 5-dr MPV, 96-00	400	700	15 ³ / ₄	27 ¹ / ₂
SEAT Alhambra , 5-dr MPV, 96-00	400	700	15 ³ / ₄	27 ¹ / ₂
VOLKSWAGEN Sharan , 5-dr MPV, 96-00	400	700	15 ³ / ₄	27 ¹ / ₂

