





# Thule Rapid System Kit 1287

# > Instructions

**TOYOTA Landcruiser Prado**, 5-dr SUV, 02-09

**TOYOTA Landcruiser 90**, 5-dr SUV, 02-03

**TOYOTA Landcruiser (120)**, 5-dr SUV, 04-09

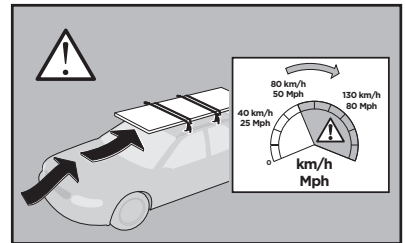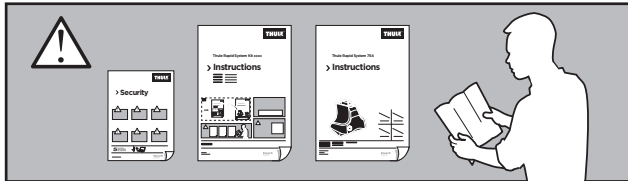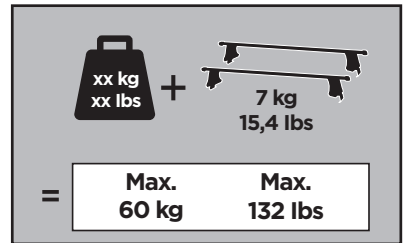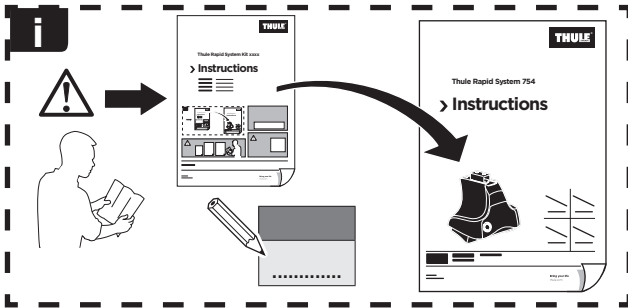

ISO 11154-E

**141287**

C.20170601  
519-1287-02

**Bring your life**

thule.com



111 x2




477 x2




x1

113 x2





551 x2



x1

# 1

	X (scale)	X (mm)	X (inch)
<b>TOYOTA Landcruiser Prado</b> , 5-dr SUV, 02-09	48	1131	44 1/2
<b>TOYOTA Landcruiser 90</b> , 5-dr SUV, 02-03	48	1131	44 1/2
<b>TOYOTA Landcruiser (120)</b> , 5-dr SUV, 04-09	48	1131	44 1/2

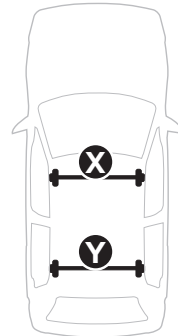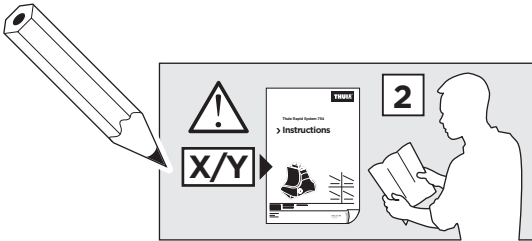



	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Landcruiser Prado</b> , 5-dr SUV, 02-09	44	1091	43
<b>TOYOTA Landcruiser 90</b> , 5-dr SUV, 02-03	44	1091	43
<b>TOYOTA Landcruiser (120)</b> , 5-dr SUV, 04-09	44	1091	43


2

TOYOTA Landcruiser Prado, 5-dr SUV, 02-09

TOYOTA Landcruiser 90, 5-dr SUV, 02-03

TOYOTA Landcruiser (120), 5-dr SUV, 04-09

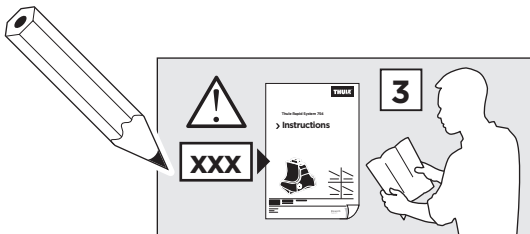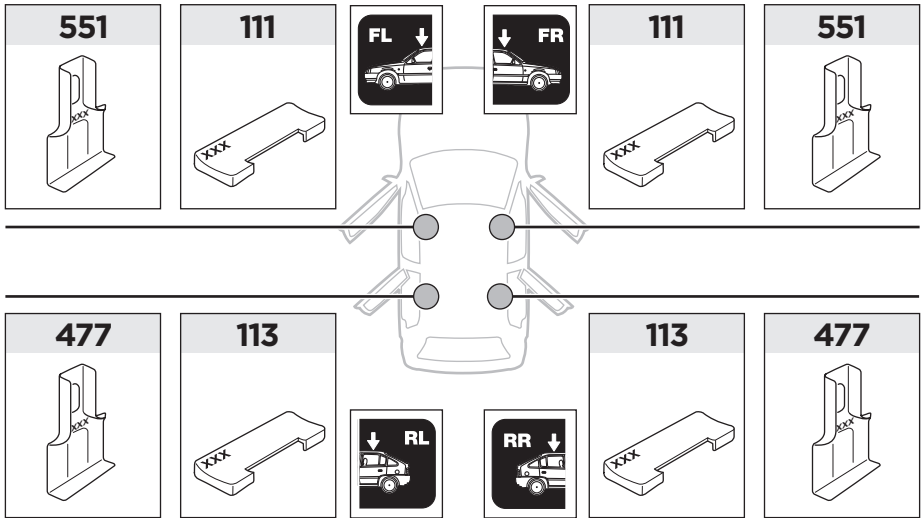

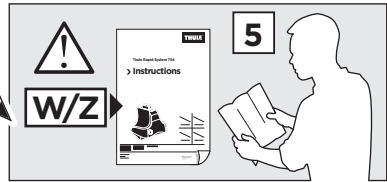**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Landcruiser Prado</b> , 5-dr SUV, 02-09	<b>355</b>	<b>710</b>	<b>14</b>	<b>28</b>
<b>TOYOTA Landcruiser 90</b> , 5-dr SUV, 02-03	<b>355</b>	<b>710</b>	<b>14</b>	<b>28</b>
<b>TOYOTA Landcruiser (120)</b> , 5-dr SUV, 04-09	<b>355</b>	<b>710</b>	<b>14</b>	<b>28</b>

