







Thule Rapid System Kit 1095

> Instructions

BMW 3-series, 4-dr Sedan, 98-01, 02-04 / *99-02, 03-05

*North America

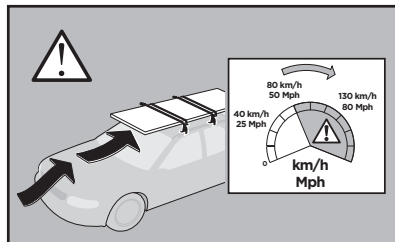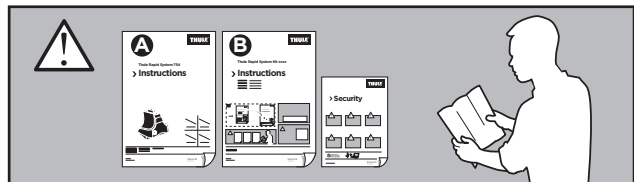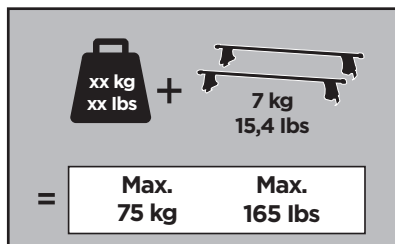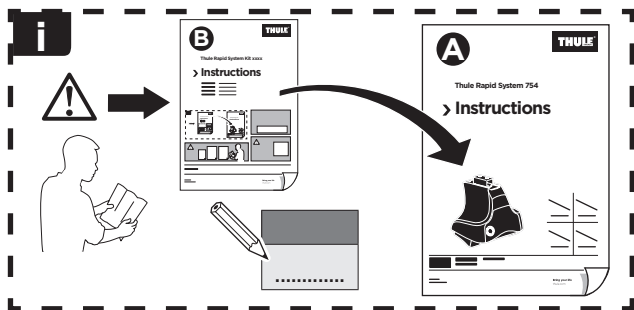

ISO 11154-E


141095

C.20130626
519-1095-02

Bring your life
thule.com



07 x4



24 x2



25 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
BMW 3-series , 4-dr Sedan, 98-01, 02-04 / *99-02, 03-05	31,5	966	38

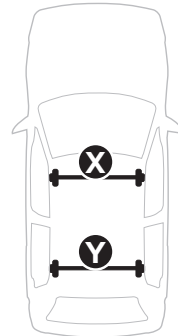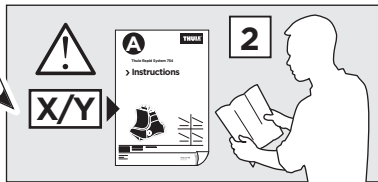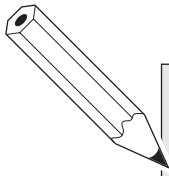


	Y (scale)	Y (mm)	Y (inch)
BMW 3-series , 4-dr Sedan, 98-01, 02-04 / *99-02, 03-05	29,5	946	37 1/4

2

BMW 3-series, 4-dr Sedan, 98-01, 02-04 / *99-02, 03-05

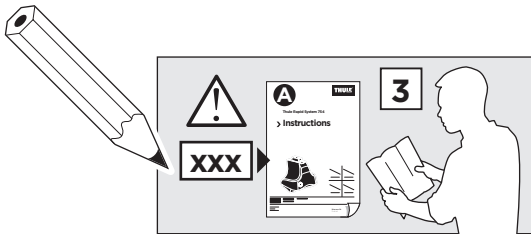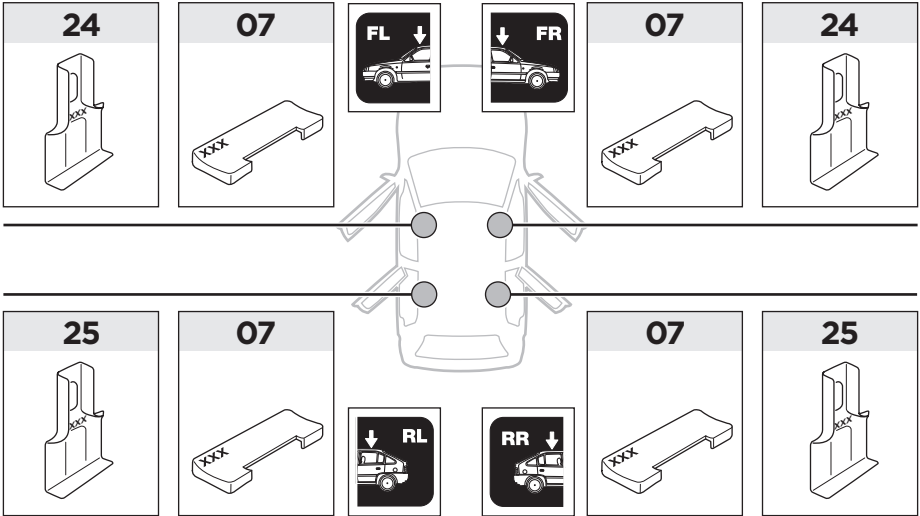

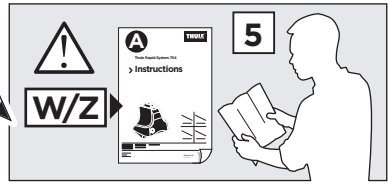3

	W (mm)	Z (mm)	W (inch)	Z (inch)
BMW 3-series, 4-dr Sedan, 98-01, 02-04 / *99-02, 03-05	180	700	7 1/8	27 1/2

