



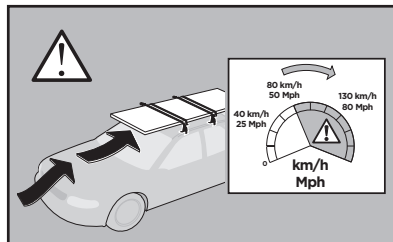

Thule Rapid System Kit 1741

> Instructions

HYUNDAI Santa Fe, 5-dr SUV, 13-15, 16-18

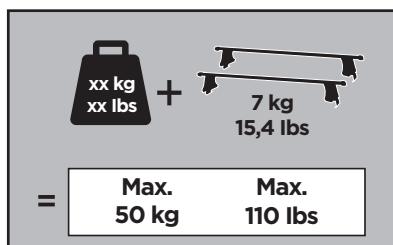


ISO 11154-E

141741
C.20180601
519-1741-03


Bring your life
thule.com




137 x2



366 x1



367 x1



225 x2



1100 x2






x1



x1

1


	X (scale)	X (mm)	X (inch)
HYUNDAI Santa Fe, 5-dr SUV, 13-15, 16-18	47	1121	44 1/8

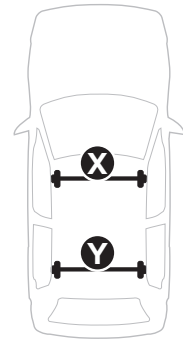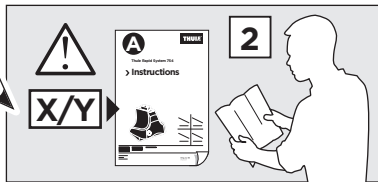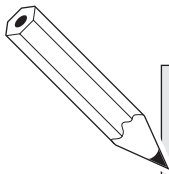



	Y (scale)	Y (mm)	Y (inch)
HYUNDAI Santa Fe, 5-dr SUV, 13-15, 16-18	42,5	1076	42 3/8

2

HYUNDAI Santa Fe, 5-dr SUV, 13-15, 16-18

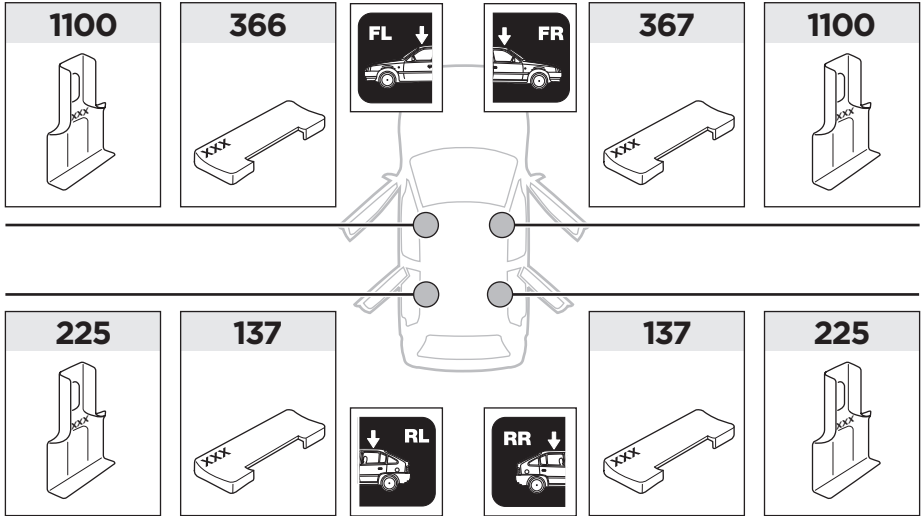

3

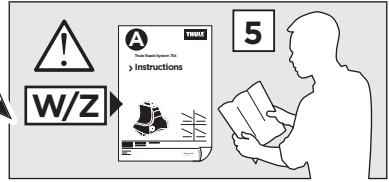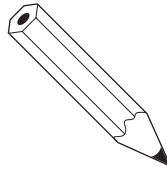

	W (mm)	Z (mm)	W (inch)	Z (inch)
HYUNDAI Santa Fe , 5-dr SUV, 13-15, 16-18	270	700	10 ⁵/₈	27 ¹/₂

