





Thule Rapid System Kit 1490

> Instructions




TOYOTA Highlander, 5-dr SUV, 10-13*

TOYOTA Kluger, 4-dr SUV, 07-13*


* Without rails

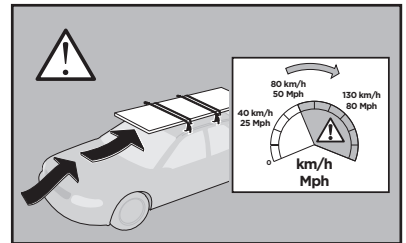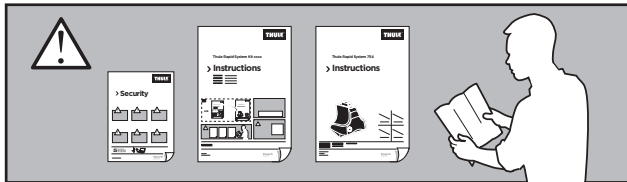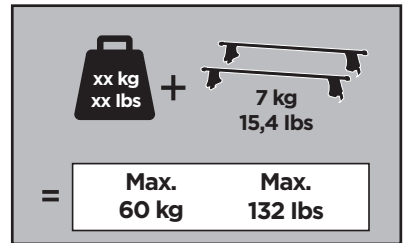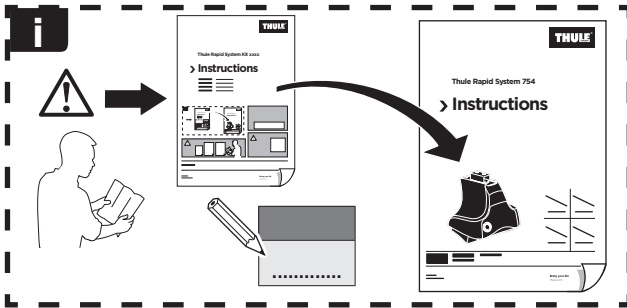

ISO 11154-E

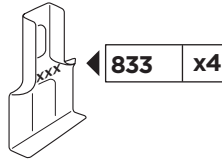



x1

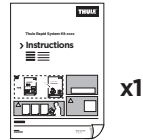

x1

1


	X (scale)	X (mm)	X (inch)
TOYOTA Highlander , 5-dr SUV, 10-13	49,5	1146	45 1/8
TOYOTA Kluger , 4-dr SUV, 07-13	49,5	1146	45 1/8

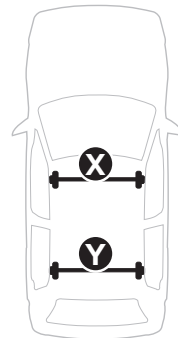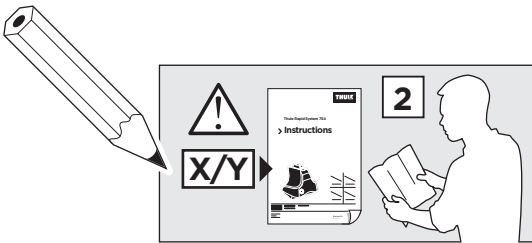


	Y (scale)	Y (mm)	Y (inch)
TOYOTA Highlander , 5-dr SUV, 10-13	47	1121	44 1/8
TOYOTA Kluger , 4-dr SUV, 07-13	47	1121	44 1/8

2

TOYOTA Highlander, 5-dr SUV, 10-13
TOYOTA Kluger, 4-dr SUV, 07-13

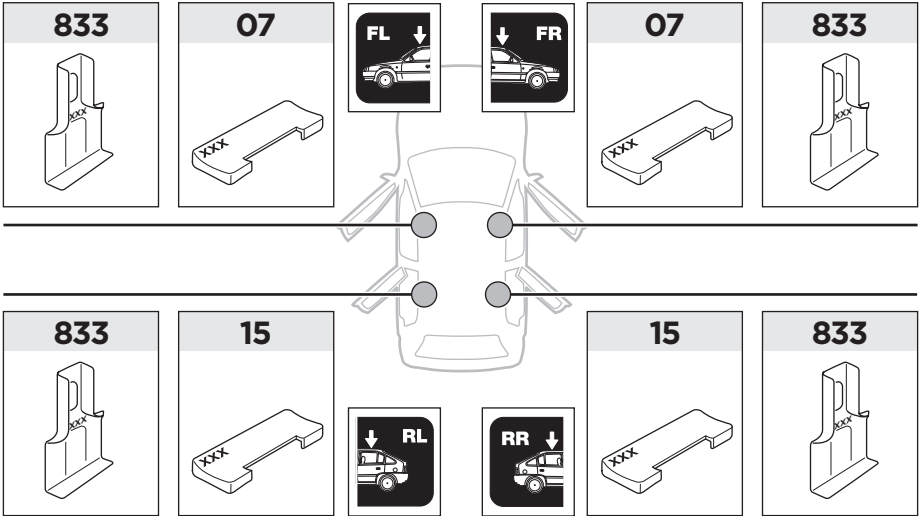

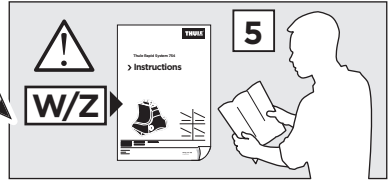3

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Highlander , 5-dr SUV, 10-13	470	750	18 1/2	29 1/2
TOYOTA Kluger , 4-dr SUV, 07-13	470	750	18 1/2	29 1/2

