



## Thule Rapid System Kit 1192





# > Instructions

**CHRYSLER Neon**, 4-dr Sedan, 00-04

**DODGE Neon**, 4-dr Sedan, 00-04 / \*00-05

**PLYMOUTH Neon**, 4-dr Sedan, 00-04 / \*00-01

\*North America



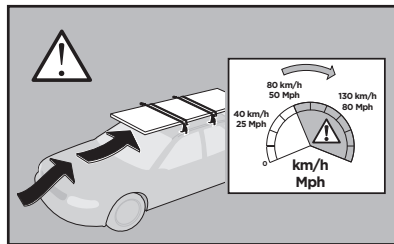
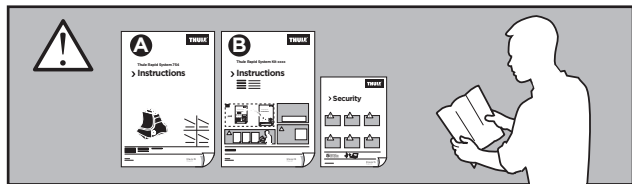
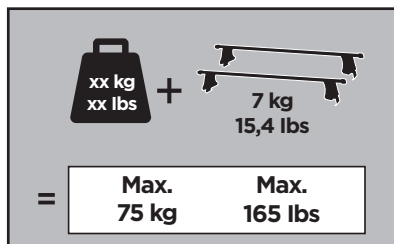
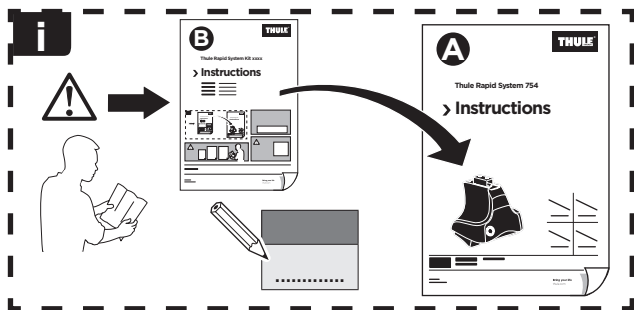


ISO 11154-E

141192



C.20130703  
519-1192-02

Bring your life  
thule.com

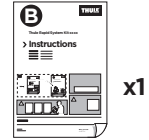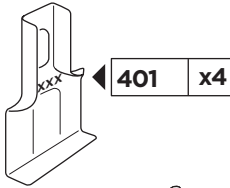

# 1

	X (scale)	X (mm)	X (inch)
<b>CHRYSLER Neon</b> , 4-dr Sedan, 00-04	20	851	33 1/2
<b>DODGE Neon</b> , 4-dr Sedan, 00-04 / *00-05	20	851	33 1/2
<b>PLYMOUTH Neon</b> , 4-dr Sedan, 00-04 / *00-01	20	851	33 1/2

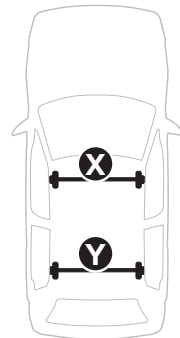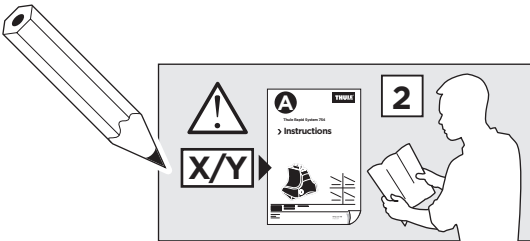



	Y (scale)	Y (mm)	Y (inch)
<b>CHRYSLER Neon</b> , 4-dr Sedan, 00-04	16	811	31 7/8
<b>DODGE Neon</b> , 4-dr Sedan, 00-04 / *00-05	16	811	31 7/8
<b>PLYMOUTH Neon</b> , 4-dr Sedan, 00-04 / *00-01	16	811	31 7/8

2


**CHRYSLER Neon**, 4-dr Sedan, 00-04

**DODGE Neon**, 4-dr Sedan, 00-04 / \*00-05

**PLYMOUTH Neon**, 4-dr Sedan, 00-04 / \*00-01

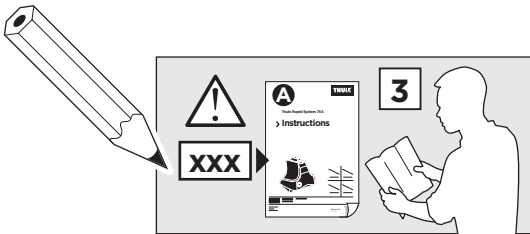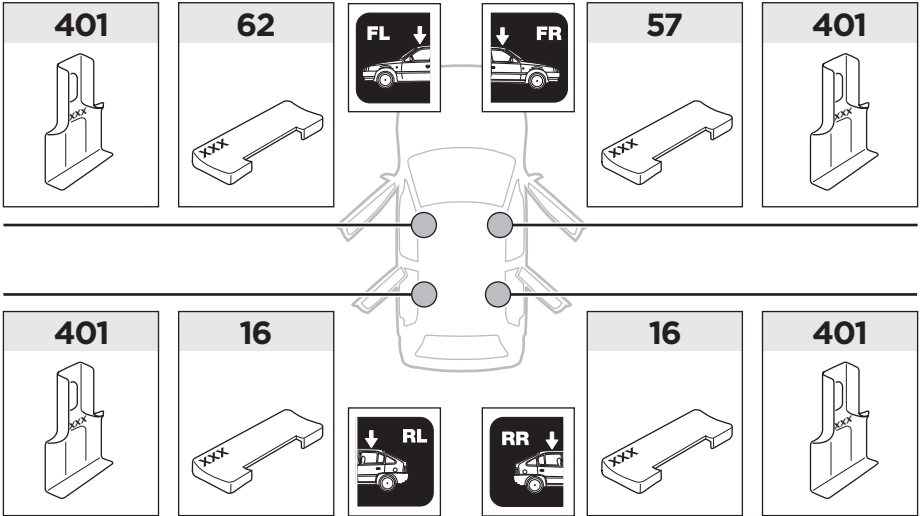

3

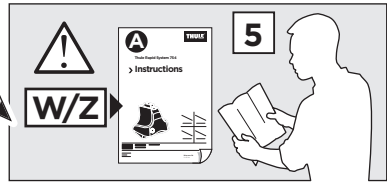

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>CHRYSLER Neon</b> , 4-dr Sedan, 00-04	210	650	8 1/4	25 5/8
<b>DODGE Neon</b> , 4-dr Sedan, 00-04 / *00-05	210	650	8 1/4	25 5/8
<b>PLYMOUTH Neon</b> , 4-dr Sedan, 00-04 / *00-01	210	650	8 1/4	25 5/8

