
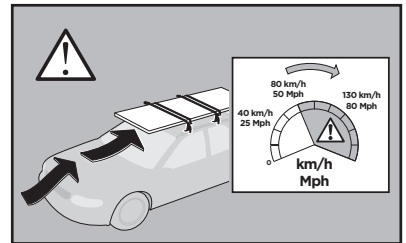
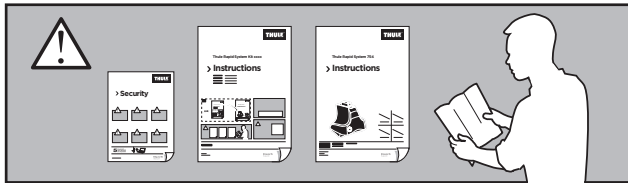
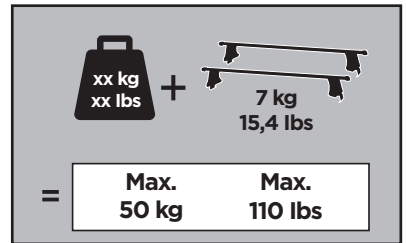


# Thule Rapid System Kit 1233

# > Instructions

**MERCEDES C-Class**, 3-dr Coupé, 01-07 / \*02-04, 05-07

\*North America

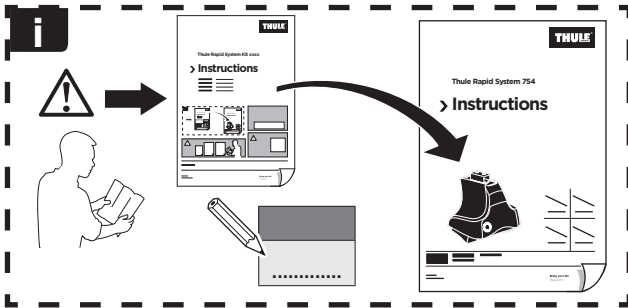

ISO 11154-E

**141233**


C.2012119  
519-1233-03

**Bring your life**


thule.com




06 x2



23 x1



24 x1



265 x2



x1





372 x2



x1

1



	X (scale)	X (mm)	X (inch)
<b>MERCEDES C-Class, 3-dr Coupé, 01-07 / *02-04, 05-07</b>	<b>31,5</b>	<b>966</b>	<b>38</b>

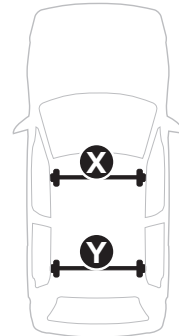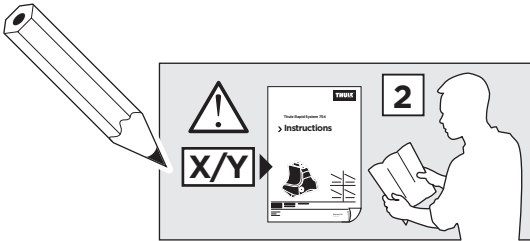



	Y (scale)	Y (mm)	Y (inch)
<b>MERCEDES C-Class, 3-dr Coupé, 01-07 / *02-04, 05-07</b>	<b>28,5</b>	<b>936</b>	<b>36 7/8</b>

**2**

**MERCEDES C-Class, 3-dr Coupé, 01-07 / \*02-04, 05-07**

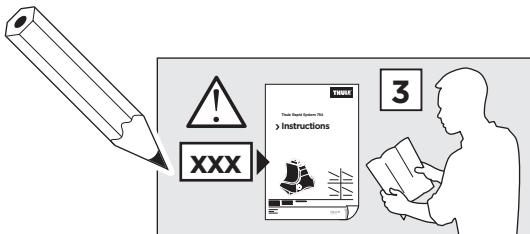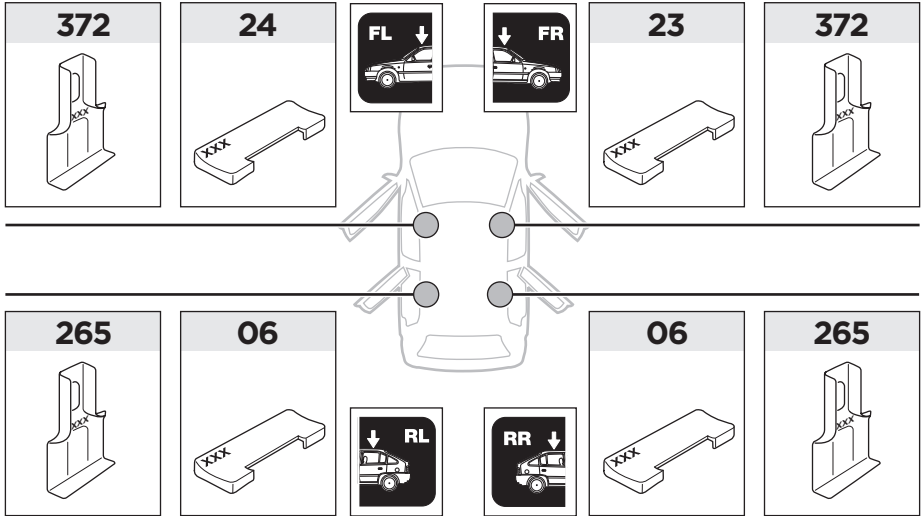

3

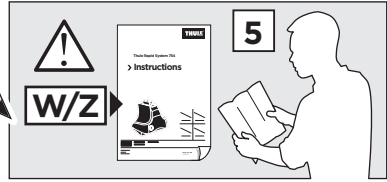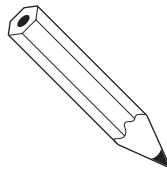

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>MERCEDES C-Class</b> , 3-dr Coupé, 01-07 / *02-04, 05-07	<b>175</b>	<b>650</b>	<b>6 <sup>7</sup>/<sub>8</sub></b>	<b>25 <sup>5</sup>/<sub>8</sub></b>

