
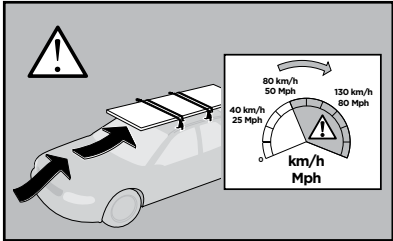
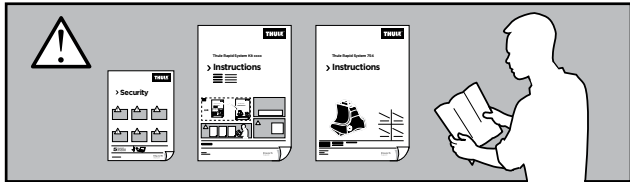
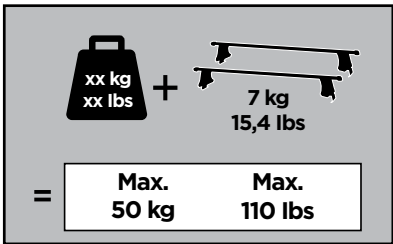


Thule Rapid System Kit 1136

> Instructions

TOYOTA Funcargo, 5-dr MPV, 99-05 (JPN)

TOYOTA Yaris Verso, 5-dr MPV, 00-05




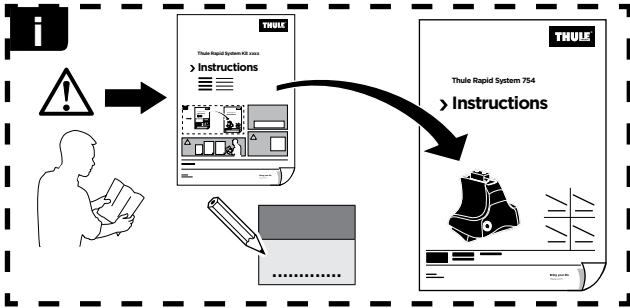


ISO 11154-E

141136



C.20121018
519-1136-01

Bring your life
thule.com

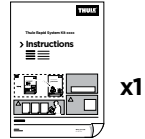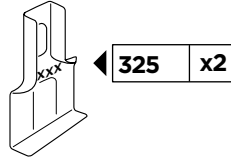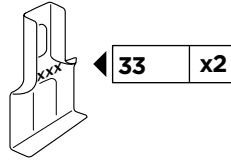

1

	X (scale)	X (mm)	X (inch)
TOYOTA Funcargo , 5-dr MPV, 99-05 (JPN)	36,5	1016	40
TOYOTA Yaris Verso , 5-dr MPV, 00-05	36,5	1016	40

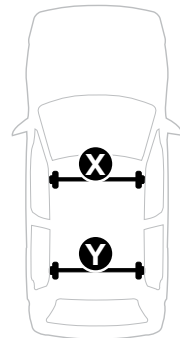
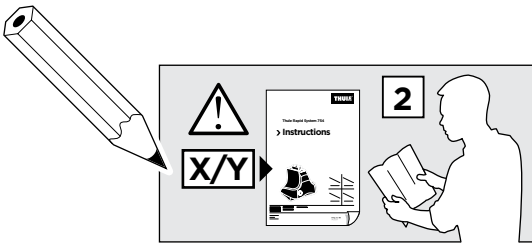



	Y (scale)	Y (mm)	Y (inch)
TOYOTA Funcargo , 5-dr MPV, 99-05 (JPN)	33,5	986	38 7/8
TOYOTA Yaris Verso , 5-dr MPV, 00-05	33,5	986	38 7/8

2

TOYOTA Funcargo, 5-dr MPV, 99-05 (JPN)

TOYOTA Yaris Verso, 5-dr MPV, 00-05

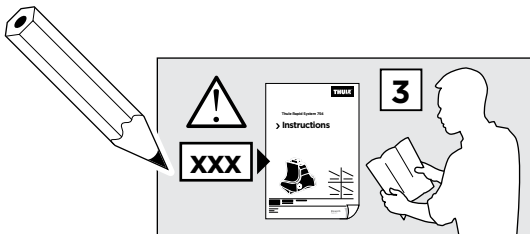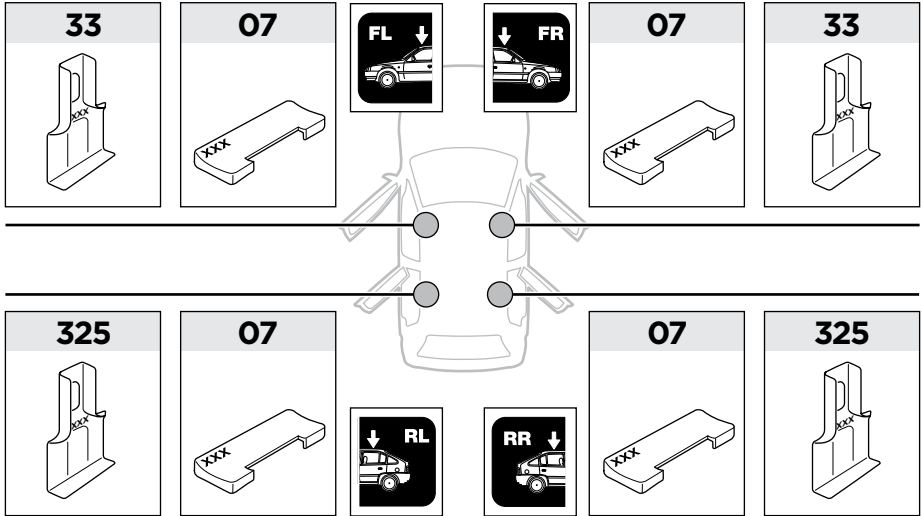

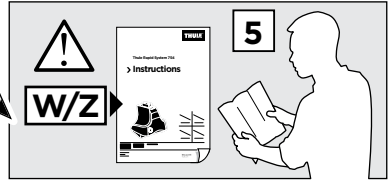3

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Funcargo , 5-dr MPV, 99-05 (JPN)	290	711	11 ³/₈	28
TOYOTA Yaris Verso , 5-dr MPV, 00-05	290	711	11 ³/₈	28

