
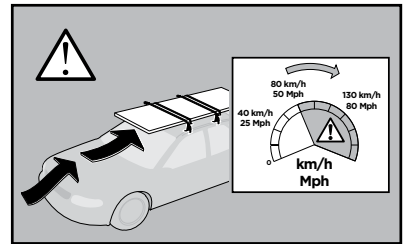
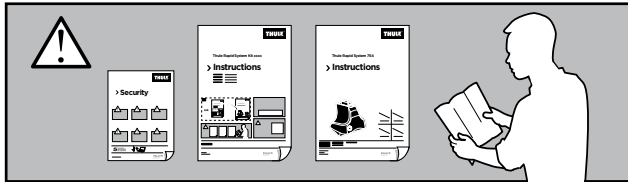
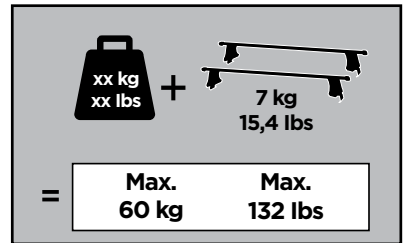


# Thule Rapid System Kit 1686

# > Instructions

AUDI A1, 5-dr Hatchback, 12-





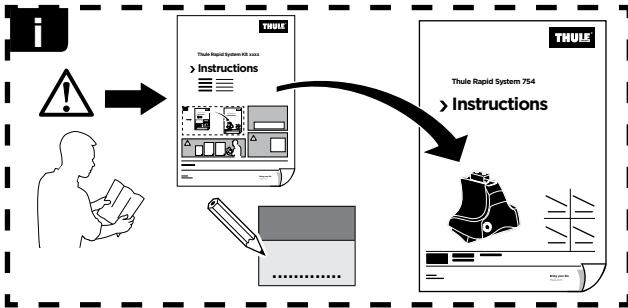


ISO 11154-E

141686



C.20120419  
519-1686-01

Bring your life  
thule.com

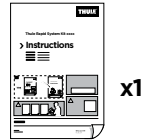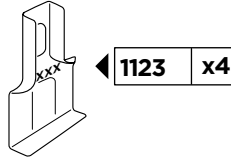

1


	X (scale)	X (mm)	X (inch)
AUDI A1, 5-dr Hatchback, 12-	33	981	38 <sup>5</sup> / <sub>8</sub>

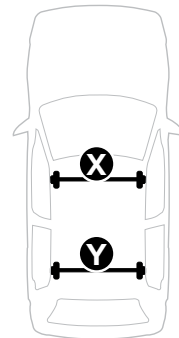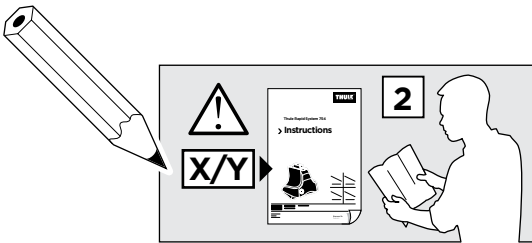


	Y (scale)	Y (mm)	Y (inch)
AUDI A1, 5-dr Hatchback, 12-	30,5	956	37 <sup>5</sup> / <sub>8</sub>

**2**

**AUDI A1, 5-dr Hatchback, 12-**

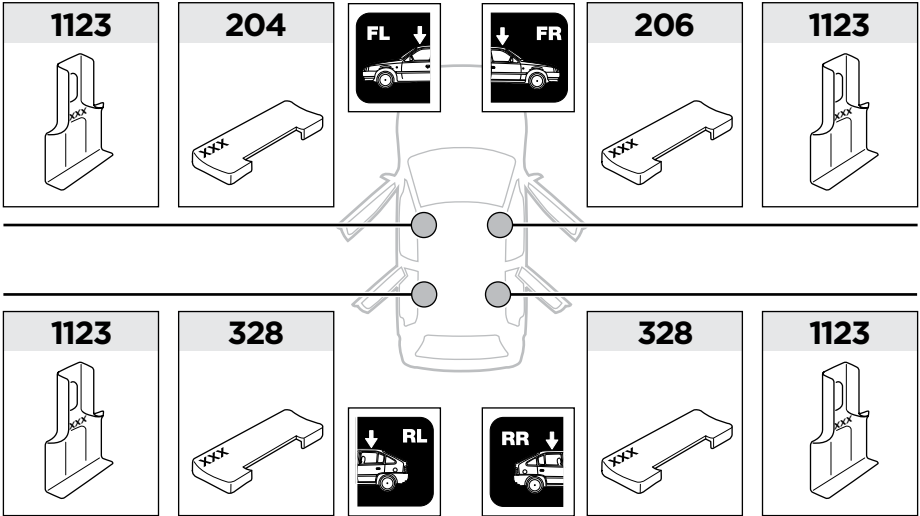

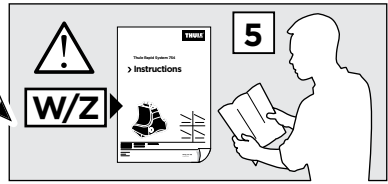**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>AUDI A1, 5-dr Hatchback, 12-</b>	<b>210</b>	<b>695</b>	<b>8 1/4</b>	<b>27 3/8</b>

