
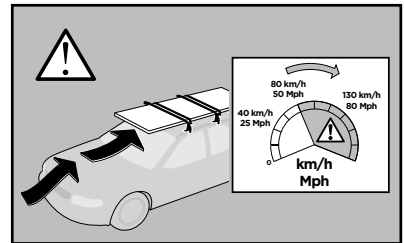
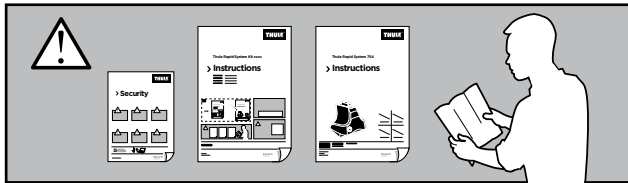
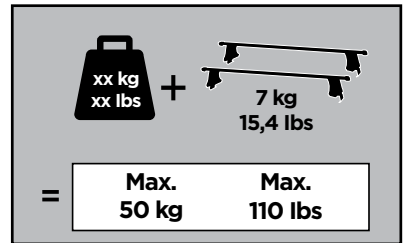


# Thule Rapid System Kit 1372

# > Instructions

PROTON Gen 2, 5-dr Hatchback, 04-

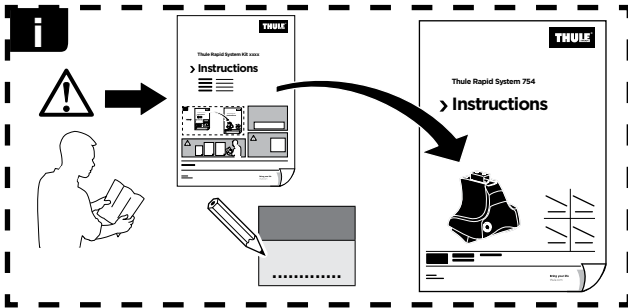

ISO 11154-E


141372

C.20121003  
519-1372-01

Bring your life  
thule.com




- 74 x1
- 75 x1
- 197 x1
- 198 x1



- 687 x1
- 688 x1
- 689 x1
- 690 x1





x1



x1

1


	X (scale)	X (mm)	X (inch)
<b>PROTON Gen 2, 5-dr Hatchback, 04-</b>	<b>28</b>	<b>931</b>	<b>36 5/8</b>

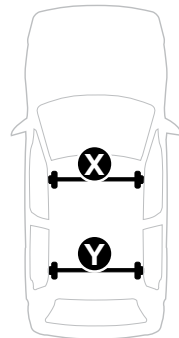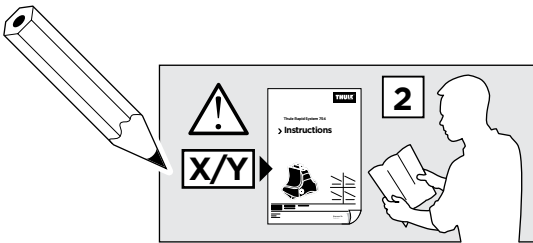



	Y (scale)	Y (mm)	Y (inch)
<b>PROTON Gen 2, 5-dr Hatchback, 04-</b>	<b>28</b>	<b>931</b>	<b>36 5/8</b>

**2**

**PROTON Gen 2, 5-dr Hatchback, 04-**

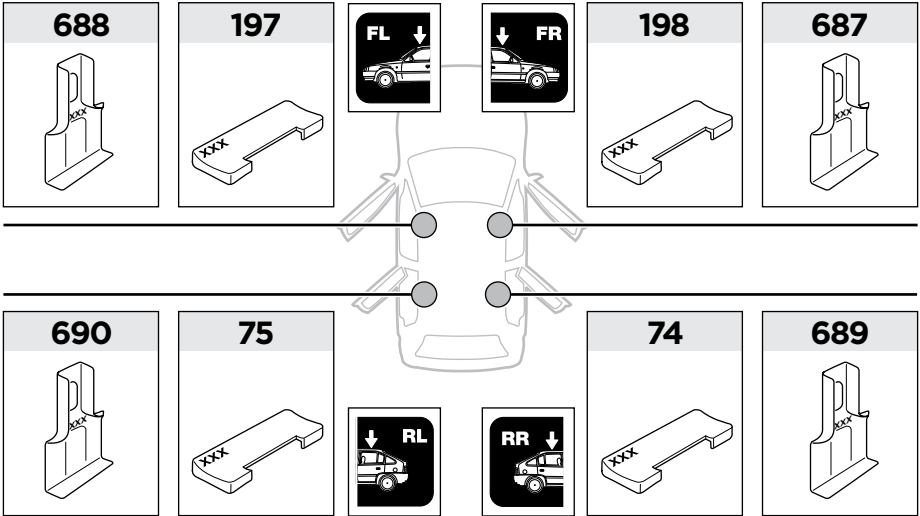

**3**

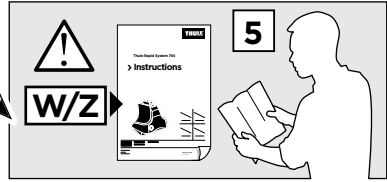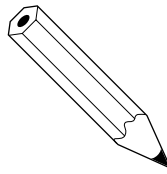

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>PROTON Gen 2, 5-dr Hatchback, 04-</b>	<b>260</b>	<b>680</b>	<b>10 1/4</b>	<b>26 3/4</b>

