


# Thule Rapid System Kit 1097

# > Instructions

MITSUBISHI Space Star, 5-dr MPV, 98-01, 02-05

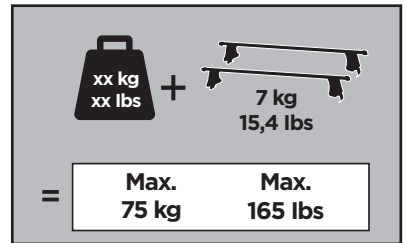

ISO 11154-E

141097


C.20130107  
519-1097-01

Bring your life

thule.com



07 x4




21 x2



22 x2






x1



x1

1


	X (scale)	X (mm)	X (inch)
<b>MITSUBISHI Space Star</b> , 5-dr MPV, 98-01, 02-05	<b>30,5</b>	<b>956</b>	<b>37 <sup>5</sup>/<sub>8</sub></b>

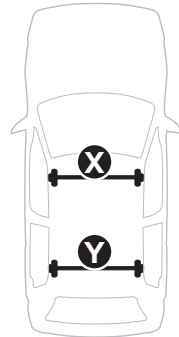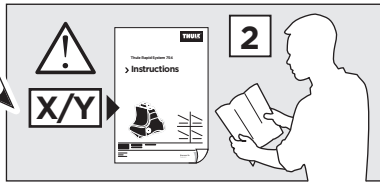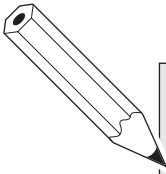


	Y (scale)	Y (mm)	Y (inch)
<b>MITSUBISHI Space Star</b> , 5-dr MPV, 98-01, 02-05	<b>28,5</b>	<b>936</b>	<b>36 <sup>7</sup>/<sub>8</sub></b>

2

MITSUBISHI Space Star, 5-dr MPV, 98-01, 02-05

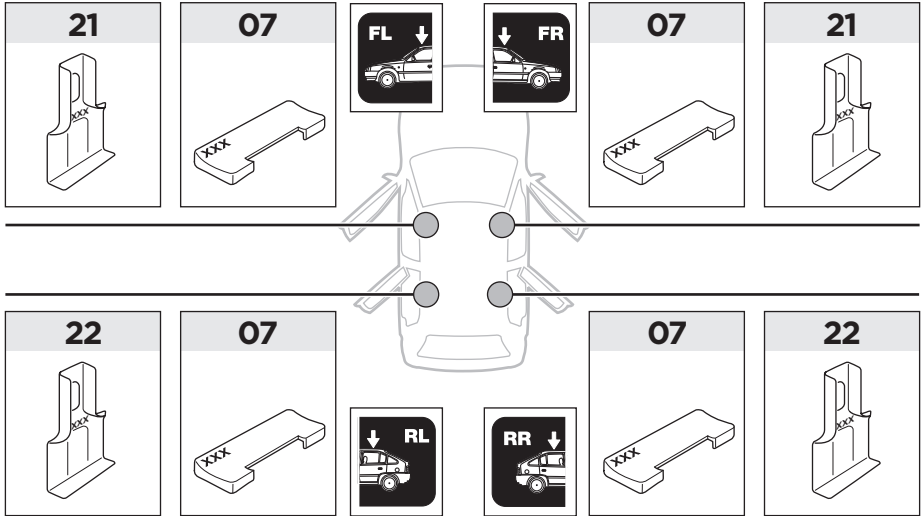

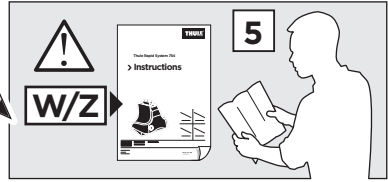**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>MITSUBISHI Space Star</b> , 5-dr MPV, 98-01, 02-05	<b>350</b>	<b>700</b>	<b>13 <sup>3</sup>/<sub>4</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

