





# Thule Rapid System Kit 1370

# > Instructions

**VOLVO V70**, 5-dr Estate, 04-07

**VOLVO V70**, 5-dr Wagon, \*05-10

\*North America

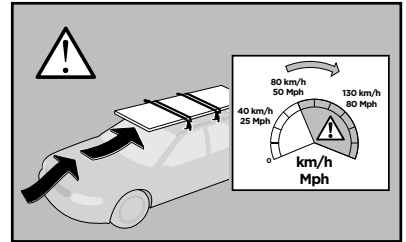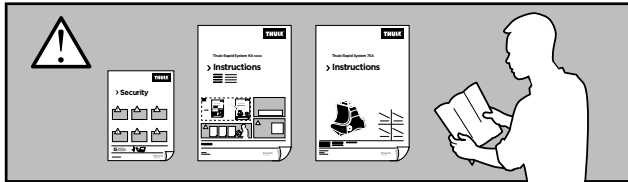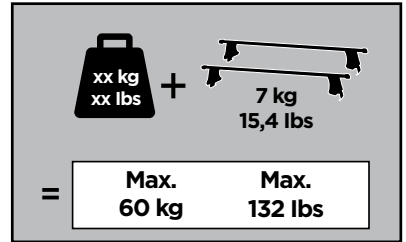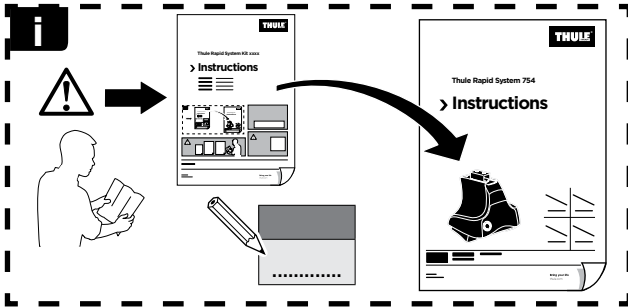

ISO 11154-E

141370


C.20121010  
519-1370-02

Bring your life

thule.com



188 x4




696 x2



698 x2






x1



x1

1

	X (scale)	X (mm)	X (inch)
<b>VOLVO V70</b> , 5-dr Estate, 04-07	38	1031	40 <sup>5</sup> / <sub>8</sub>
<b>VOLVO V70</b> , 5-dr Wagon, *05-10	38	1031	40 <sup>5</sup> / <sub>8</sub>

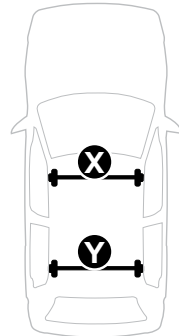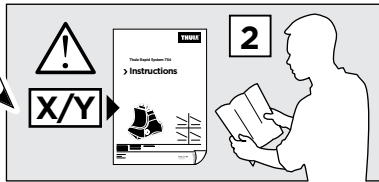
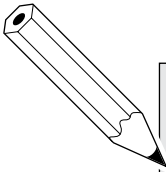


	Y (scale)	Y (mm)	Y (inch)
<b>VOLVO V70</b> , 5-dr Estate, 04-07	35,5	1006	39 <sup>5</sup> / <sub>8</sub>
<b>VOLVO V70</b> , 5-dr Wagon, *05-10	35,5	1006	39 <sup>5</sup> / <sub>8</sub>


**2**

**VOLVO V70**, 5-dr Estate, 04-07

**VOLVO V70**, 5-dr Wagon, \*05-10

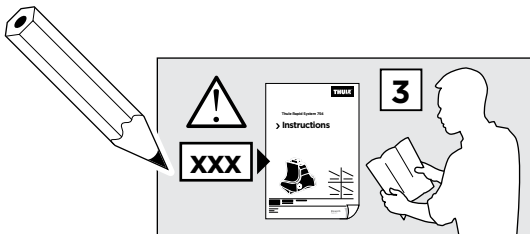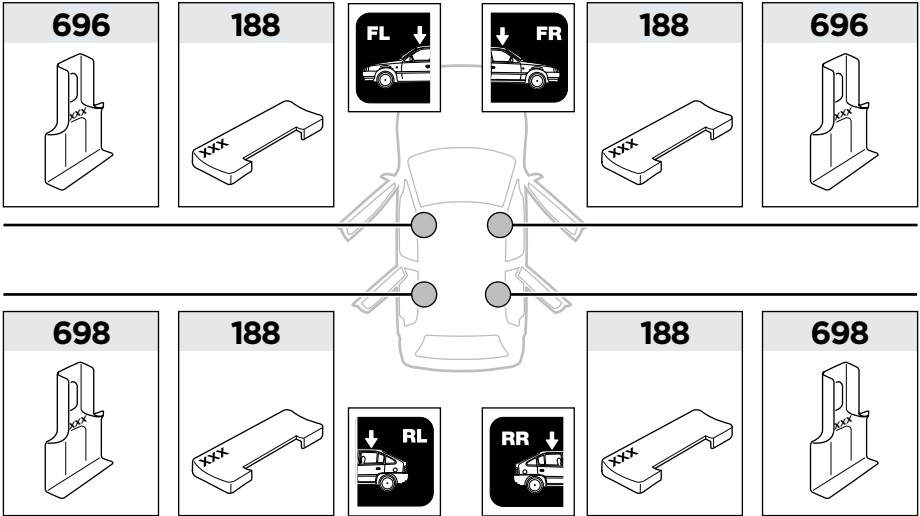

**3**

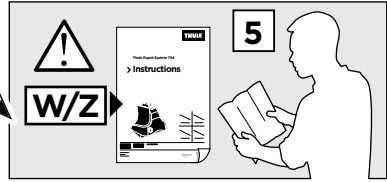

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>VOLVO V70</b> , 5-dr Estate, 04-07	<b>355</b>	<b>810</b>	<b>14</b>	<b>31 <sup>7</sup>/<sub>8</sub></b>
<b>VOLVO V70</b> , 5-dr Wagon, *05-10	<b>355</b>	<b>810</b>	<b>14</b>	<b>31 <sup>7</sup>/<sub>8</sub></b>

