
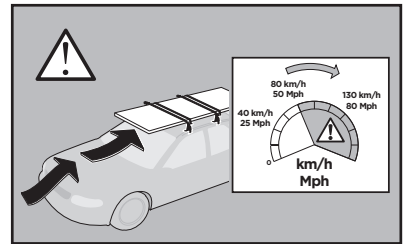
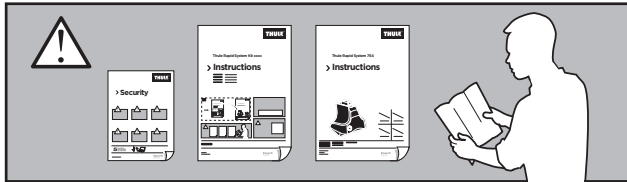
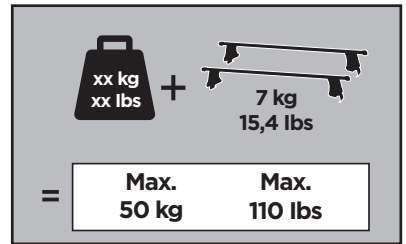


Thule Rapid System Kit 1533

> Instructions

FORD Taurus, 4-dr Sedan, 08-09

MERCURY Sable, 4-dr Sedan, 08-09

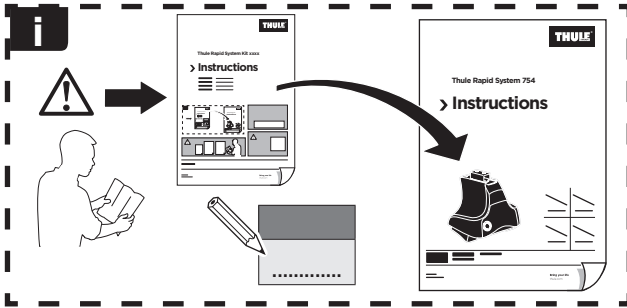


ISO 11154-E




x1

93 x4





100 x4



x1

1

	X (scale)	X (mm)	X (inch)
FORD Taurus , 4-dr Sedan, 08-09	48	1131	44 1/2
MERCURY Sable , 4-dr Sedan, 08-09	48	1131	44 1/2

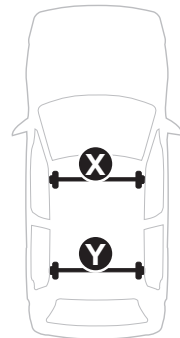
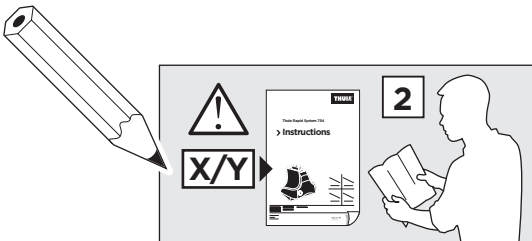



	Y (scale)	Y (mm)	Y (inch)
FORD Taurus , 4-dr Sedan, 08-09	44	1091	43
MERCURY Sable , 4-dr Sedan, 08-09	44	1091	43

2

FORD Taurus, 4-dr Sedan, 08-09

MERCURY Sable, 4-dr Sedan, 08-09

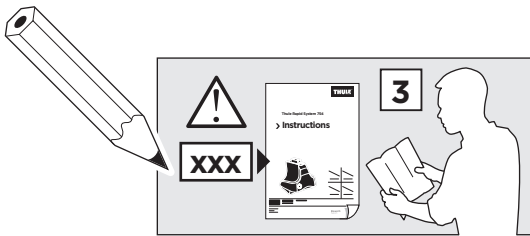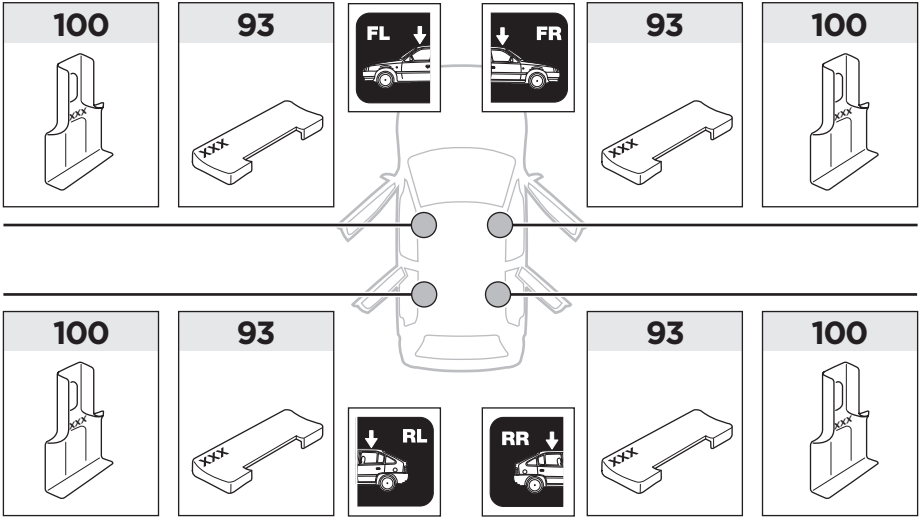

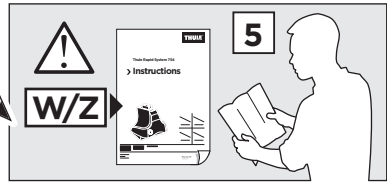3

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD Taurus , 4-dr Sedan, 08-09	250	685	9 ³/₄	27
MERCURY Sable , 4-dr Sedan, 08-09	250	685	9 ³/₄	27

