

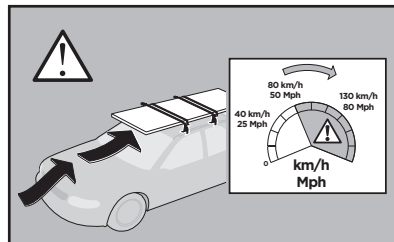


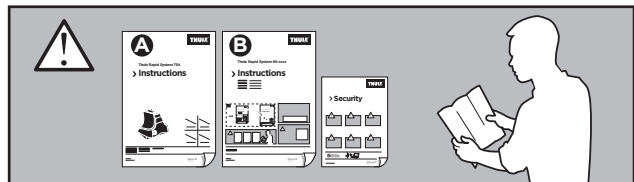

# Thule Rapid System Kit 1573

# > Instructions

SUZUKI Wagon R, 5-dr MPV, 08-

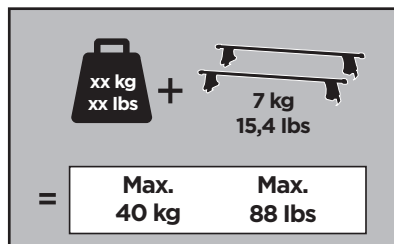

ISO 11154-E


141573

C.20130617  
519-1573-01


Bring your life  
thule.com



1076 x2



1077 x2



03 x2



248 x2






x1



x1

1


	X (scale)	X (mm)	X (inch)
SUZUKI Wagon R, 5-dr MPV, 08-	31	961	37 <sup>7</sup> / <sub>8</sub>

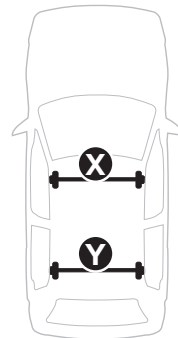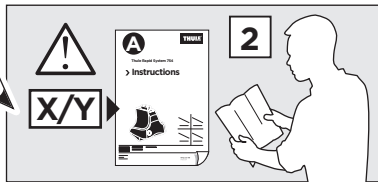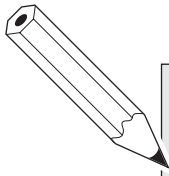

	Y (scale)	Y (mm)	Y (inch)
SUZUKI Wagon R, 5-dr MPV, 08-	28	931	36 <sup>5</sup> / <sub>8</sub>

**2**

**SUZUKI Wagon R, 5-dr MPV, 08-**

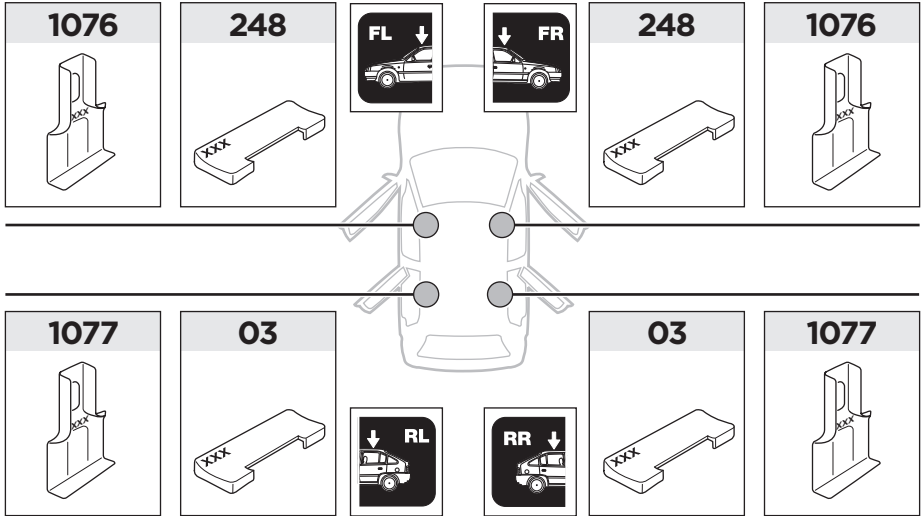

**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>SUZUKI Wagon R, 5-dr MPV, 08-</b>	<b>440</b>	<b>700</b>	<b>17 <sup>3</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

