







Thule Rapid System Kit 1105

> Instructions

DAEWOO d'Artz, 5-dr Hatchback, 98-00, 01-05

DAEWOO Matiz, 5-dr Hatchback, 98-00, 01-05

CHEVROLET Matiz, 5-dr Hatchback, 01-05

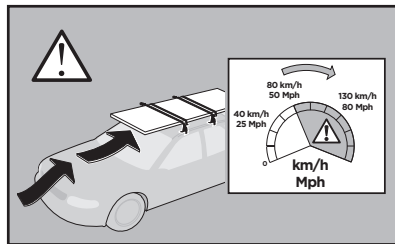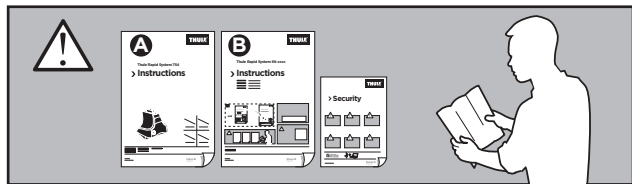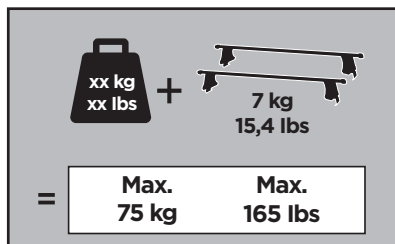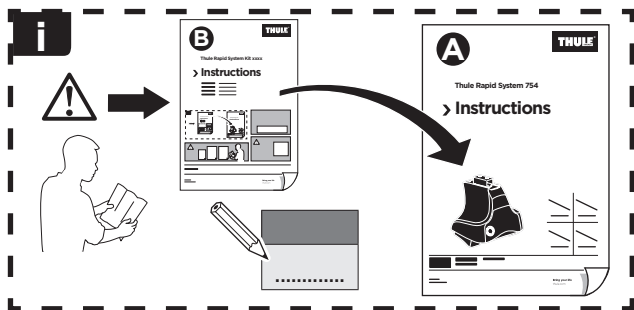

ISO 11154-E

141105

C.20130619
519-1105-01


Bring your life

thule.com



x1

07 x4






66 x4



x1

1

| | X (scale) | X (mm) | X (inch) |
|---|-----------|--------|----------|
| DAEWOO d'Artz , 5-dr Hatchback, 98-00, 01-05 | 25 | 901 | 35 1/2 |
| DAEWOO Matiz , 5-dr Hatchback, 98-00, 01-05 | 25 | 901 | 35 1/2 |
| CHEVROLET Matiz , 5-dr Hatchback, 01-05 | 25 | 901 | 35 1/2 |

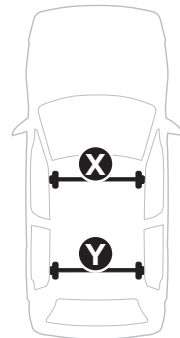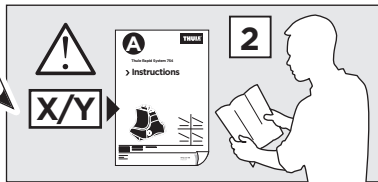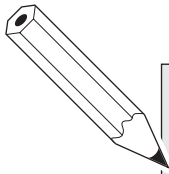



| | Y (scale) | Y (mm) | Y (inch) |
|---|-----------|--------|----------|
| DAEWOO d'Artz , 5-dr Hatchback, 98-00, 01-05 | 24 | 891 | 35 1/8 |
| DAEWOO Matiz , 5-dr Hatchback, 98-00, 01-05 | 24 | 891 | 35 1/8 |
| CHEVROLET Matiz , 5-dr Hatchback, 01-05 | 24 | 891 | 35 1/8 |

2

DAEWOO d'Artz, 5-dr Hatchback, 98-00, 01-05

DAEWOO Matiz, 5-dr Hatchback, 98-00, 01-05

CHEVROLET Matiz, 5-dr Hatchback, 01-05

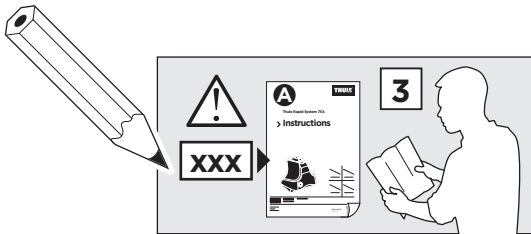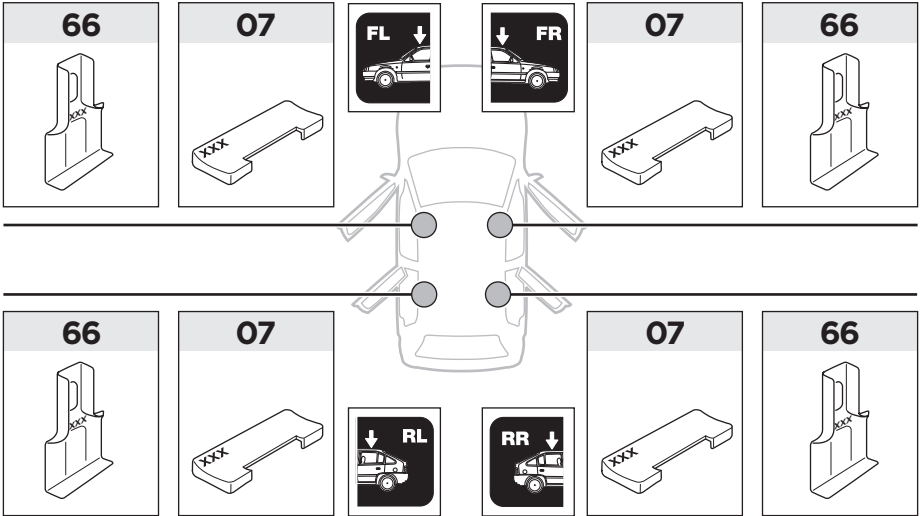

3



| | W (mm) | Z (mm) | W (inch) | Z (inch) |
|---|--------|--------|-------------------------------|--------------------------------|
| DAEWOO d'Artz , 5-dr Hatchback, 98-00, 01-05 | 250 | 700 | 9 ⁷ / ₈ | 27 ¹ / ₂ |
| DAEWOO Matiz , 5-dr Hatchback, 98-00, 01-05 | 250 | 700 | 9 ⁷ / ₈ | 27 ¹ / ₂ |
| CHEVROLET Matiz , 5-dr Hatchback, 01-05 | 250 | 700 | 9 ⁷ / ₈ | 27 ¹ / ₂ |

